



CHRYSLER PT-CRUISER HC12

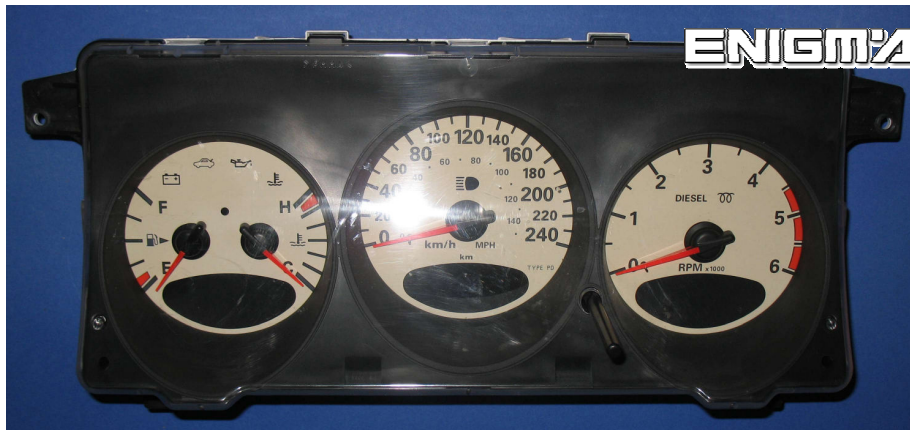

USE CABLE C12 O HCS12, REMOVE BACK COVER FROM DASH, THEN CONNECT POWER LEADS LIKE WE CAN SEE ON THIS PHOTO:

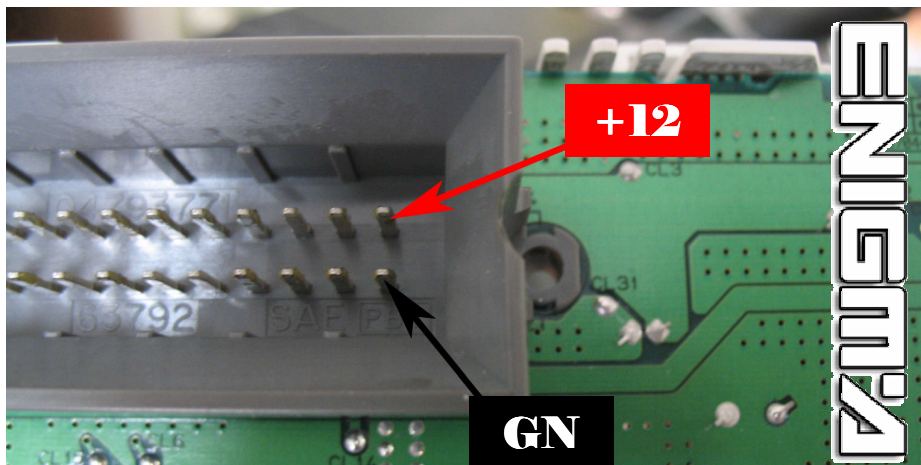

CONNECT OR SOLDER CABLE LEADS ACORDING TO COLOURS LIKE ON THIS PHOTO:

