



CITROEN BERLINGO BSI NEC

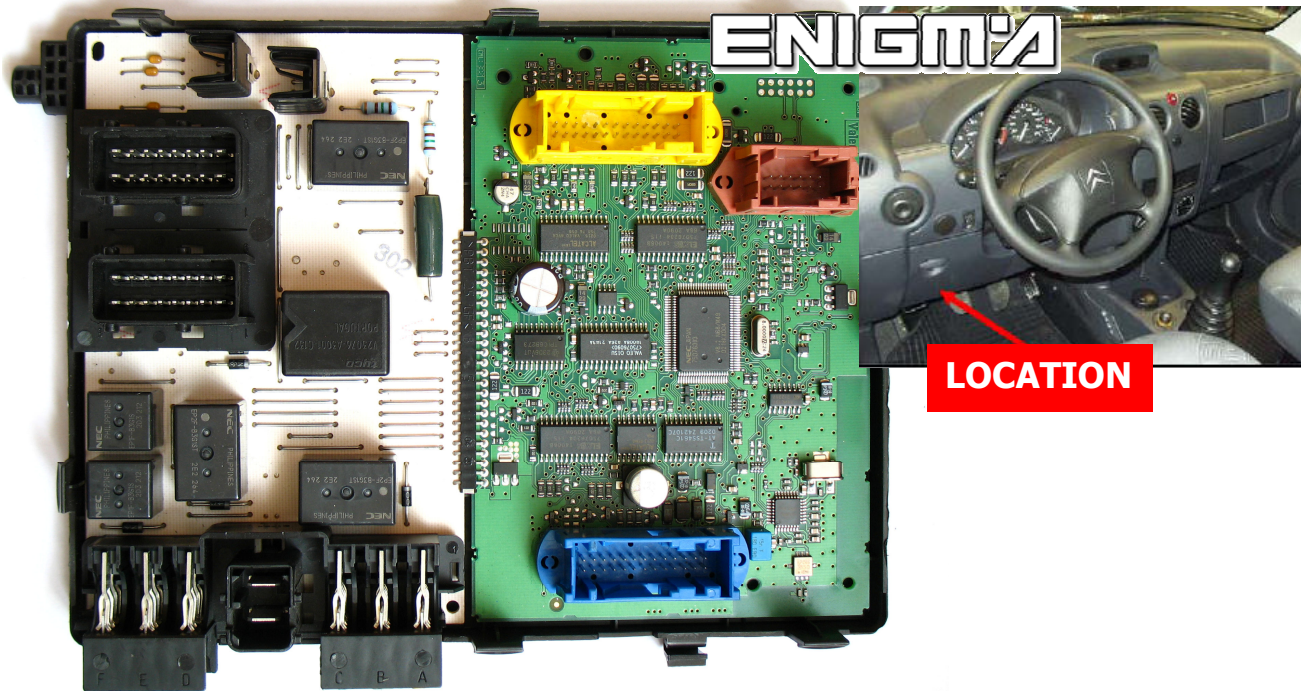

USE **CABLE C13** ALWAYS CONNECTED TO **A1** ADAPTER. REMOVE BOTH SIDES FROM BSI, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN IN NEXT PHOTOS:

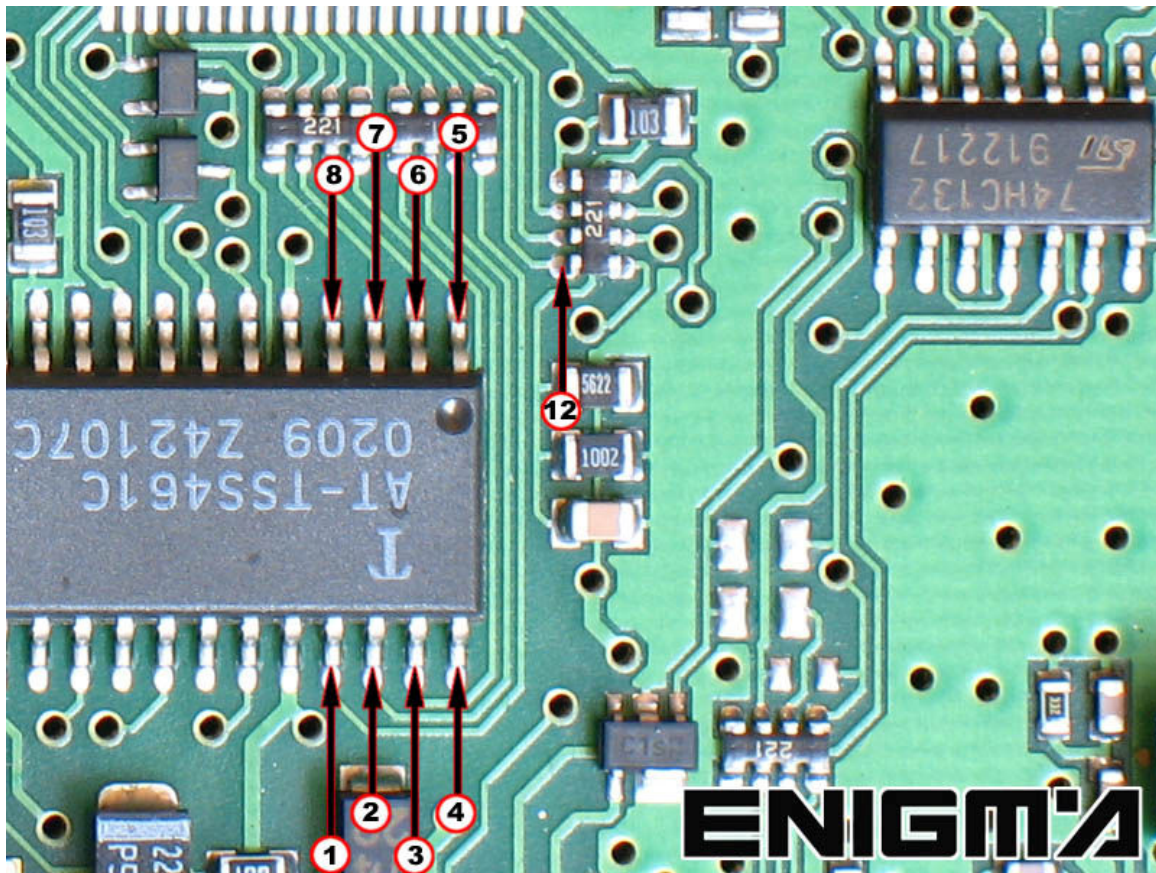

WE MUST **DESOLDER RESISTOR** FROM LEAD **9** AND **UP** PIN **10**:

