


CITROEN XSARA BSI 95040

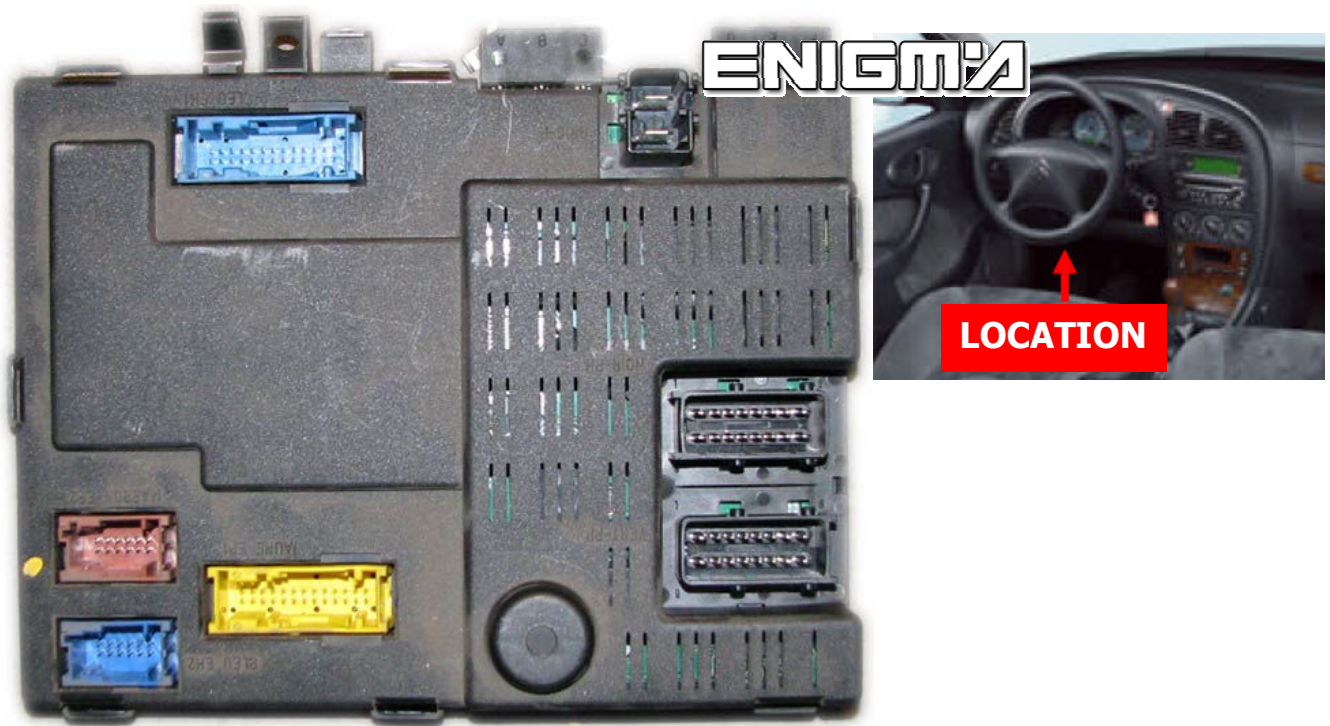

USE CABLE C4, OPEN BACK COVER FROM BSI, CAREFULLY, THEN LOCATE EPROM MEMORY 95040, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

