


FENDT 93C56

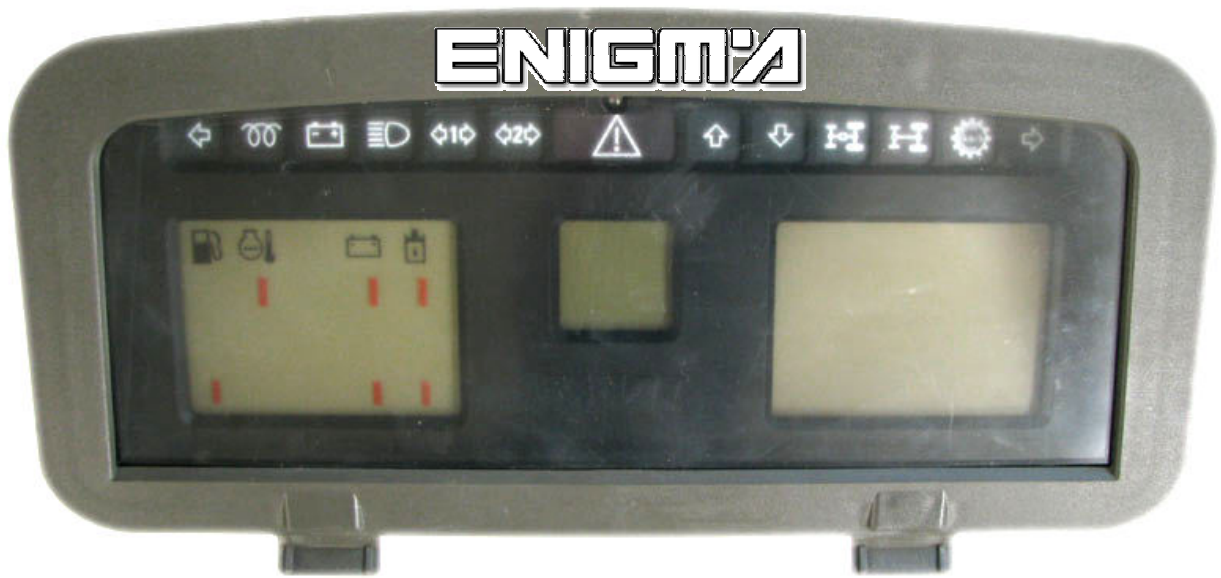

USE CABLE C4, REMOVE BACK PLASTIC COVER FROM DASH, THEN CAREFULLY TURN OUT MAIN BOARD, NOW WE CAN LOCATE EEPROM 93C56 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

