


# FIAT BRAVO-BRAVA-MAREA HC08

USE CABLE C12, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, REMOVE CAREFULLY NAILS (TO INSTALL BACK MAKE IT WITH POWER), NOW REMOVE ALL THAT WE NEED TILL WE HAVE CLEAN THE BOARD, NOW CONNECT POWER LEADS LIKE WE CAN SEE ON THIS NEXT PHOTO:

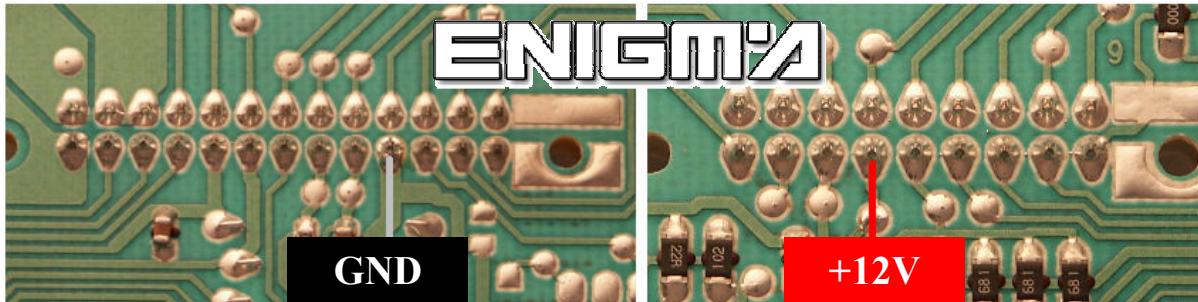

CONNECT OR SOLDER CABLE LEADS ACORDING TO COLOURS AS SHOWN OF PHOTO BELOW, **DON'T FORGET TO REALIZE A BRIDGE BETWEEN 2 POINTS:**

