


FORD COUGAR

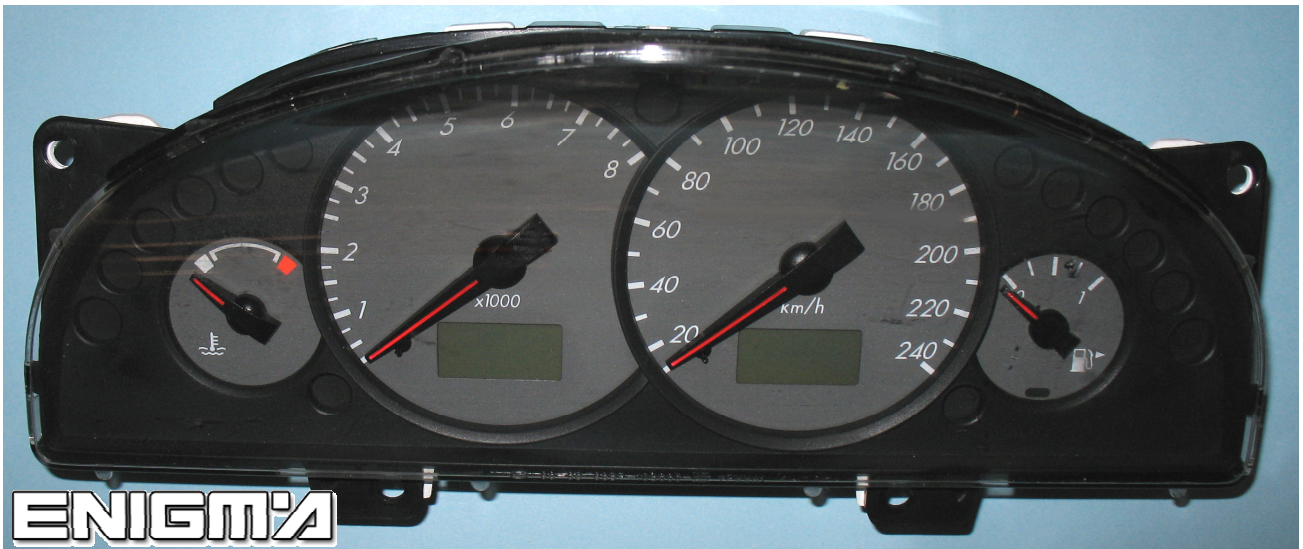

USE CABLE C11 - HC11, TAKE OFF BACK SIDE FROM DASH, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN OF PHOTO BELOW:

