


FORD COURIER - BANTAM NEC



Use **CABLE C13** ALWAYS CONNECTED TO **A1 ADAPTER**. REMOVE BOARD FROM DASH, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN IN NEXT PHOTOS:

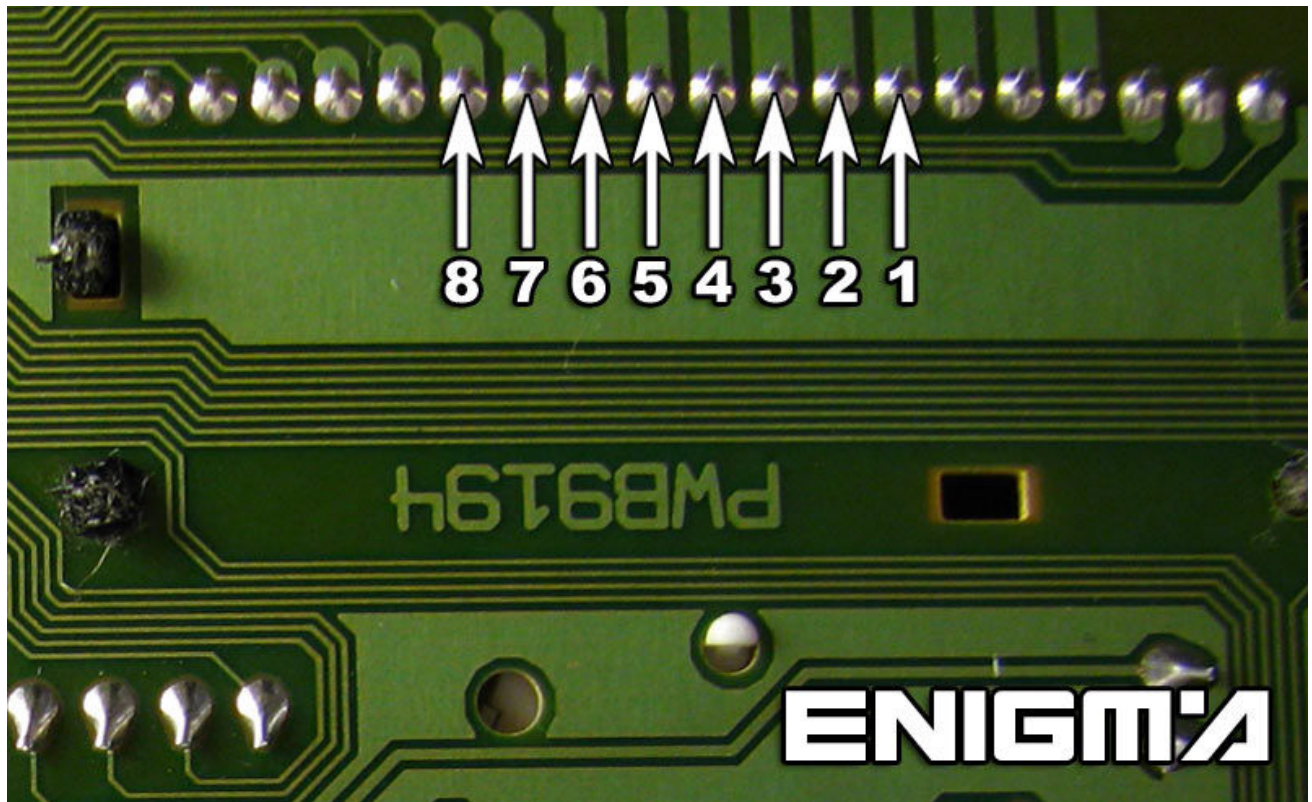

REMEMBER TO LIFT UP 2 PINS FROM MICRO!!!

