


FORD FOCUS HC11 TILL 2002



USE SPECIFIC CABLE C36, REMOVE DASH FROM CAR, CONNECT PLUG INTO WHITE DASH PLUG, AND GREY CABLE TO THE POINT SHOW ON PHOTO:

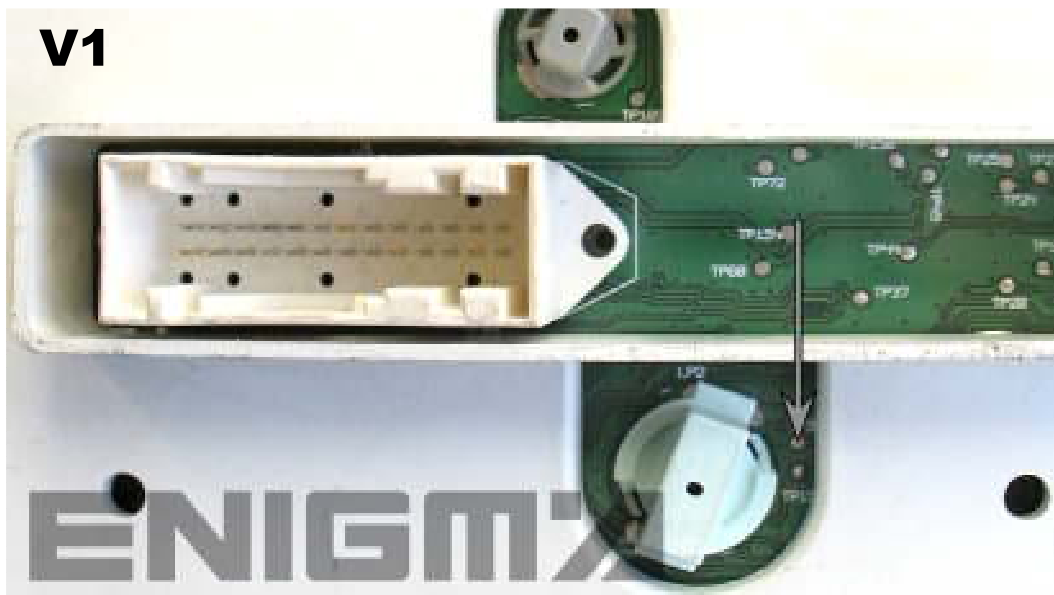

IF THIS POINT DOES NOT ON THE DASH, OPEN BACK PLASTIC COVER OF DASH, WITH 5 TORX SCREWS. THEN PULL MAIN BOARD OUT AND CONNECT IT **MAKING A BRIDGE BETWEEN PIN 1&2 FROM MICRO.**