


# FORD TRANSIT FROM 2004

## ENIGMA



USE CABLE C4, REMOVE DASH FROM CAR, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY. WHEN WE HAVE MAIN BOARD ON OUR HANDS LOCATE EEPROM 24C16 MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW: AND CLIP IT CHECKING **PIN 1** AS SHOWN OF BELOW PHOTO:

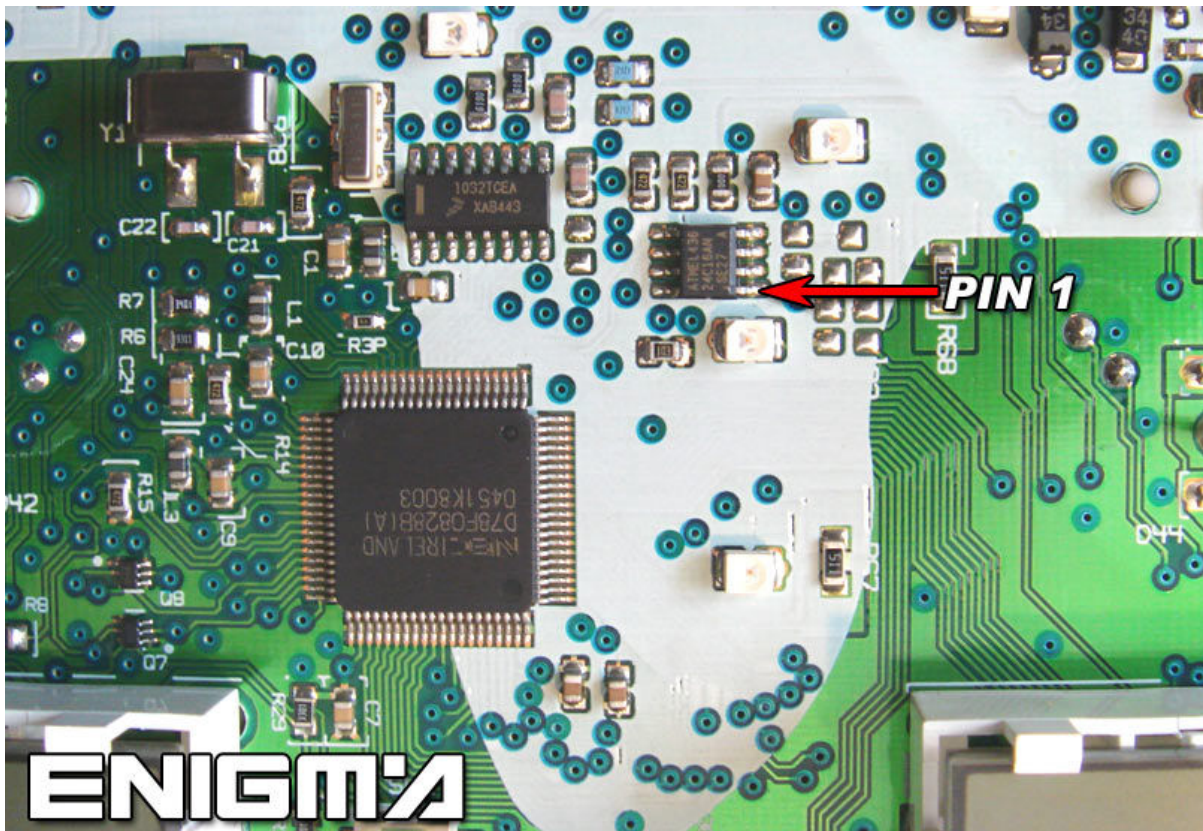

ALSO WE CAN USE C7 CABLE, REMOVE BACK PLASTIC COVER, AND WITH THE PHOTO BELOW WE CAN SOLDER CABLE LEADS ACCORDING TO COLOUR:

