


HONDA ACCORD UK-NSI



USE CABLE C5, REMOVE FRONT AND BACK PLASTICS COVERS FROM DASH. THEN REMOVE NAILS AND ENGINES (ALL TOGETHER), LIKE IN NEXT PHOTO; IT IS A VERY GOOD IDEA TO USE IN MANY DASHBOARDS FROM ASIAN CARS:

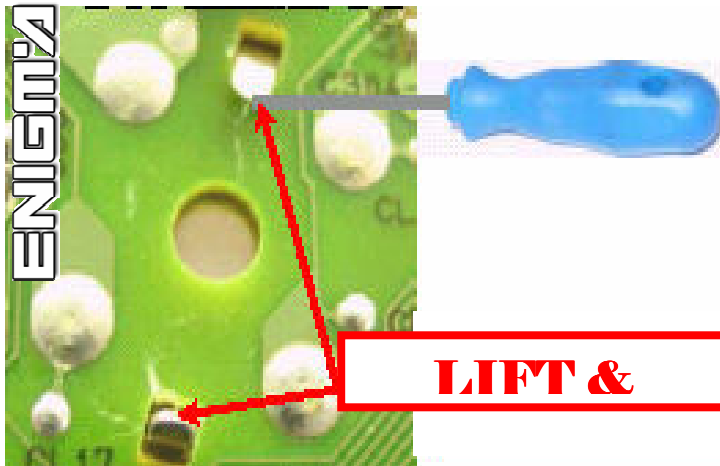

NOW ON THE MAIN BOARD LOOK FOR EPROM 93C56, AND AS WE CAN SEE ON THE PHOTOS CLIP IT AND MODIFY, ALWAYS CHECKING PIN 1:

