


HONDA CIVIC 2008

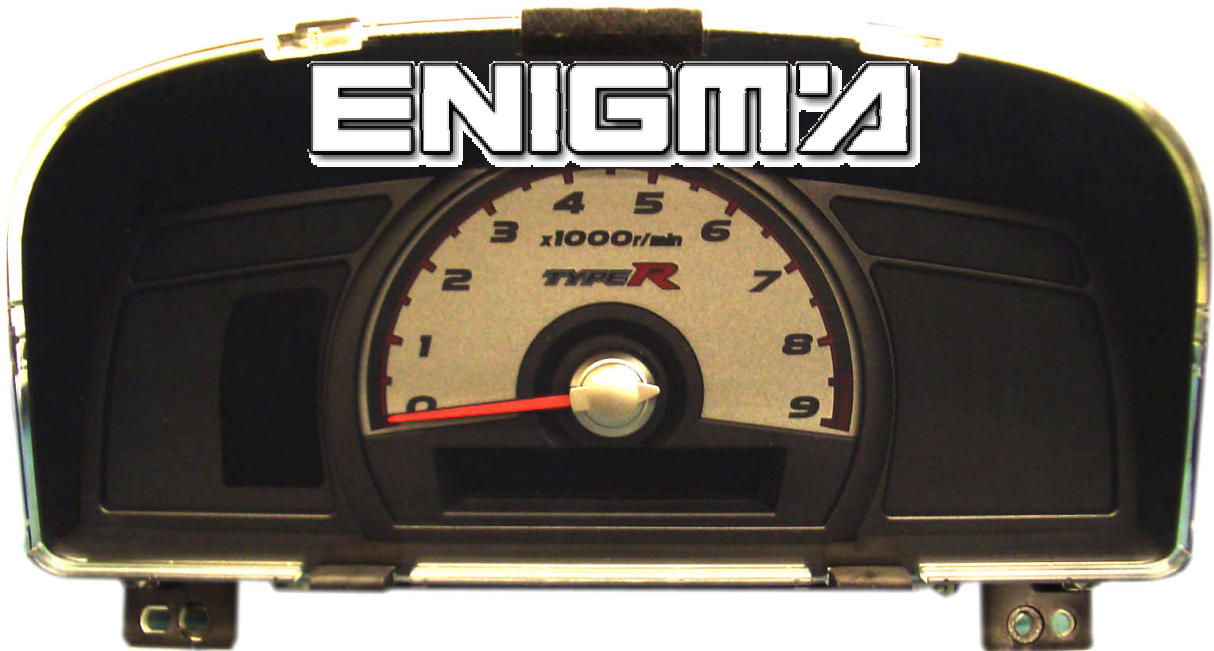

USE CABLE C4, OPEN BACK COVER FROM DASH, CAREFULLY, THEN LOCATE EPROM MEMORY, SOMETIMES MUST BE CLENEED, AND CLIP IT CHECKING PIN 1 AS WE CAN SEE ON THE PHOTO BELOW:

