


HONDA FRV 93C66

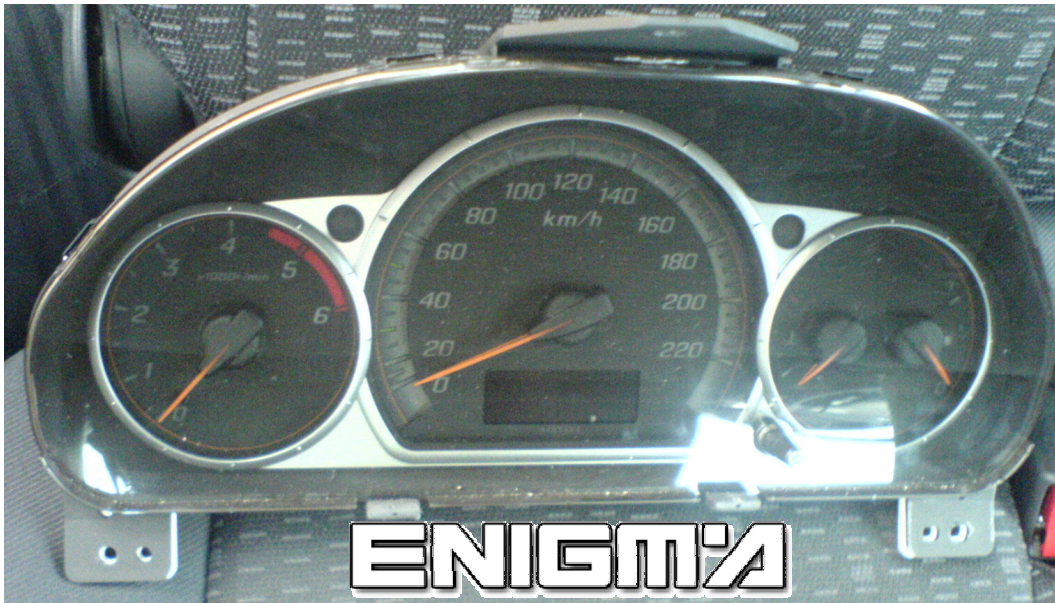

USE CABLE C4, OPEN BACK SIDE OF DASH, CAREFULLY, THEN LOCATE EPROM 93C66 MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

