


HYUNDAI ACCENT TO 2006

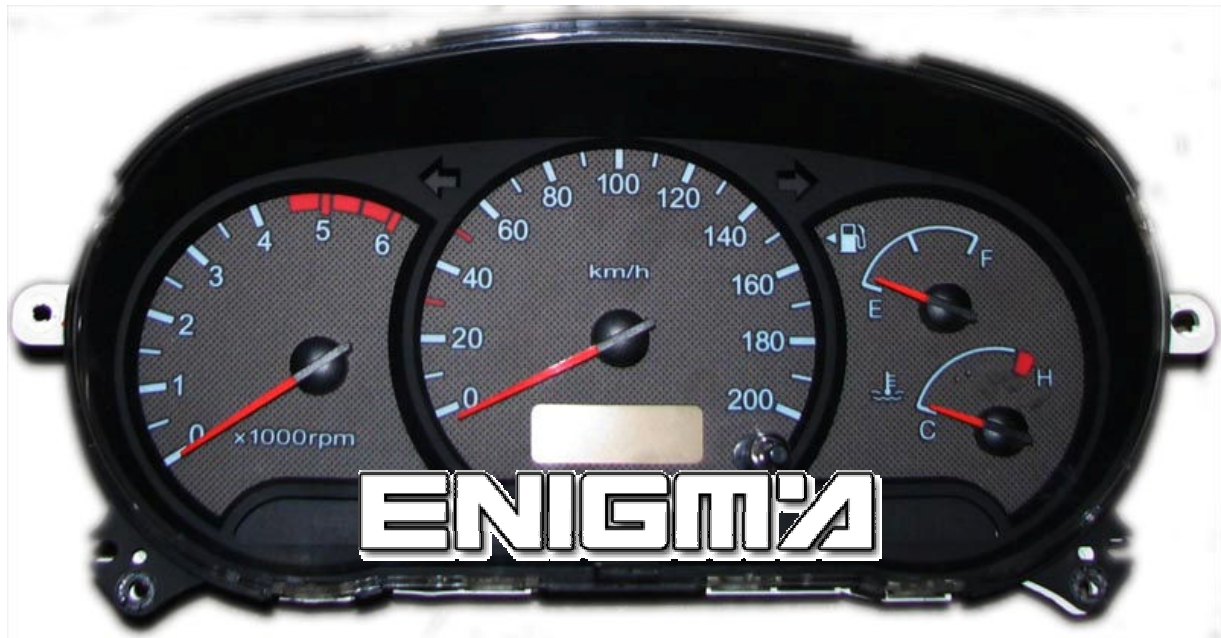

USE CABLE C4, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, WHEN WE HAVE MAIN BOARD ON HANDS LOCATE EEPROM AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

