



LAND ROVER FREELANDER 2001-2004

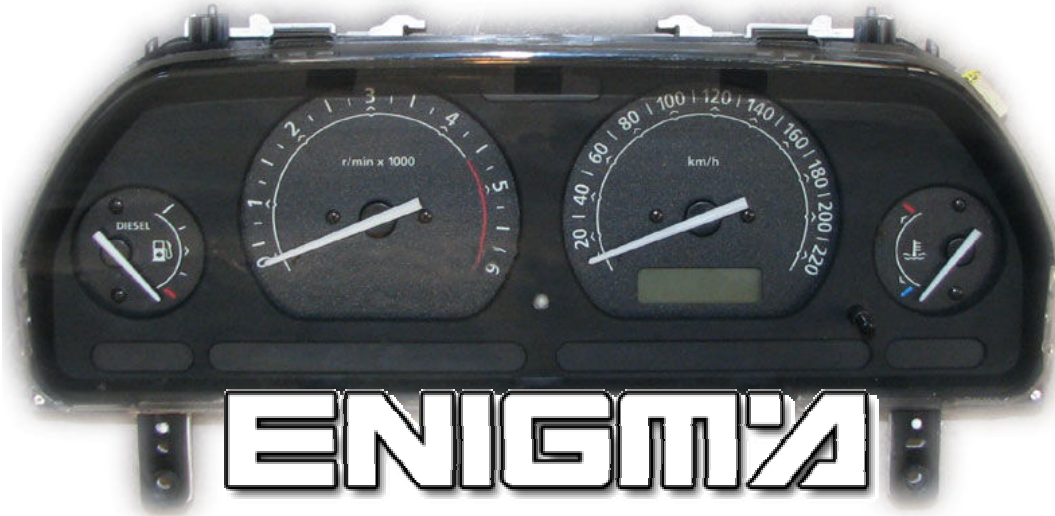

USE CABLE **C45 + A6 ADAPTER**, REMOVE BACK PLASTIC COVER FROM DASH.
NOW LOCATE POINTS ON THE BOARD LIKE IN PHOTO BELOW AND SOLDER CABLE
LEADS AS IT SHOWS TO US:

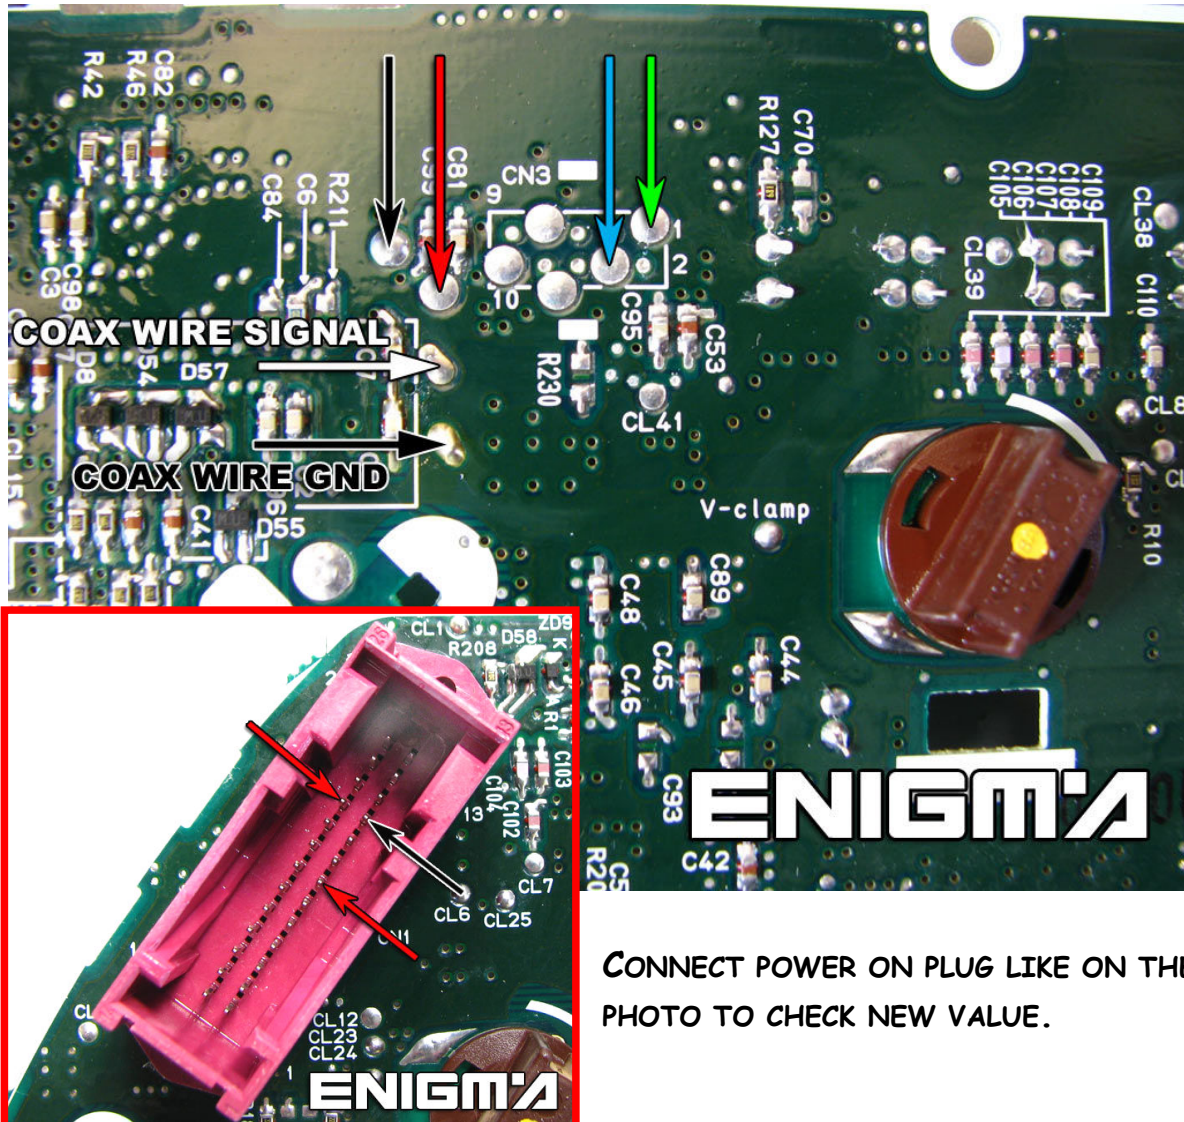

CONNECT POWER ON PLUG LIKE ON THE
PHOTO TO CHECK NEW VALUE.