


NISSAN PRIMERA VDO 2000

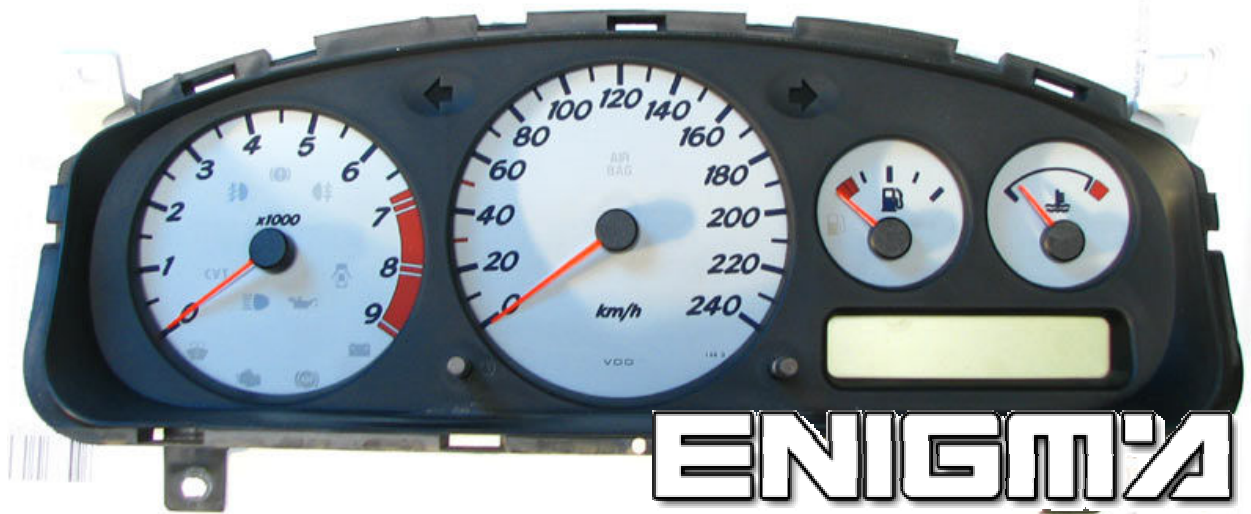

USE CABLE C4, OPEN ALL DASH, CAREFULLY, REMOVE NEEDLES, CUT PLASTIC AROUND SCREEN, AND WITH MAIN BOARD IN OUR HANDS, LOCATE EPROM MEMORY 93S56, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

