


NISSAN X-TRAIL FROM 2002



USE CABLE C4, OPEN DASH, PLEASE MAKE IT CAREFULLY, THEN LOCATE EEPROM 93C66 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

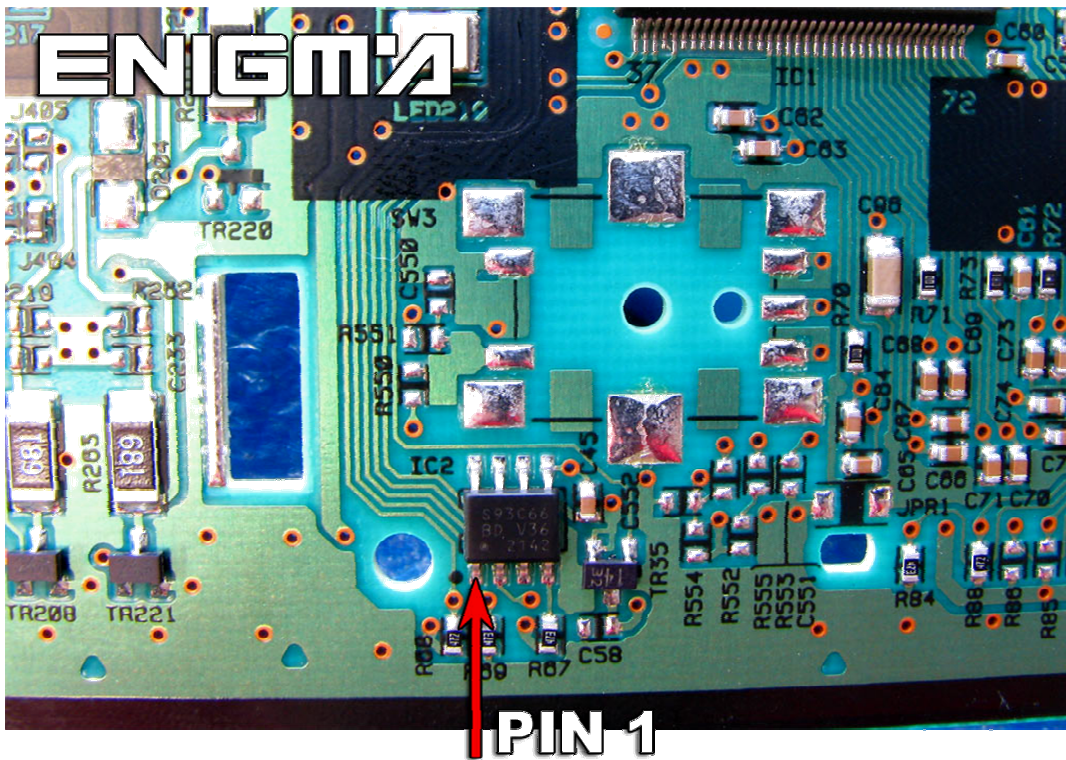

YOU CAN ALSO USE C7 CABLE, WE ONLY NEED TO LOCATE POINTS IN THE BACK SIDE FROM MAINBOARD, LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US:

