


PEUGEOT 307 BSI 2003-2006

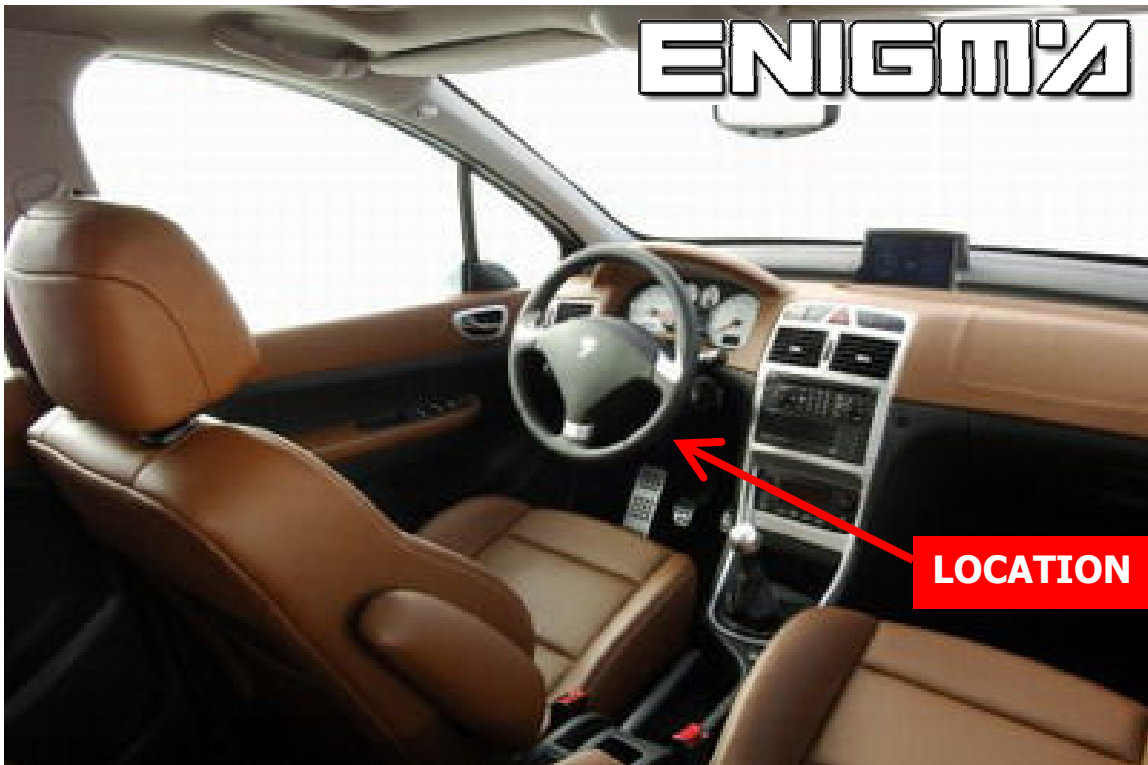

USE CABLE C7, TAKE OFF BACK SIDE FROM BSI, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO PIN AS SHOWN OF BELOW PHOTO:

