


PEUGEOT 607 BSI

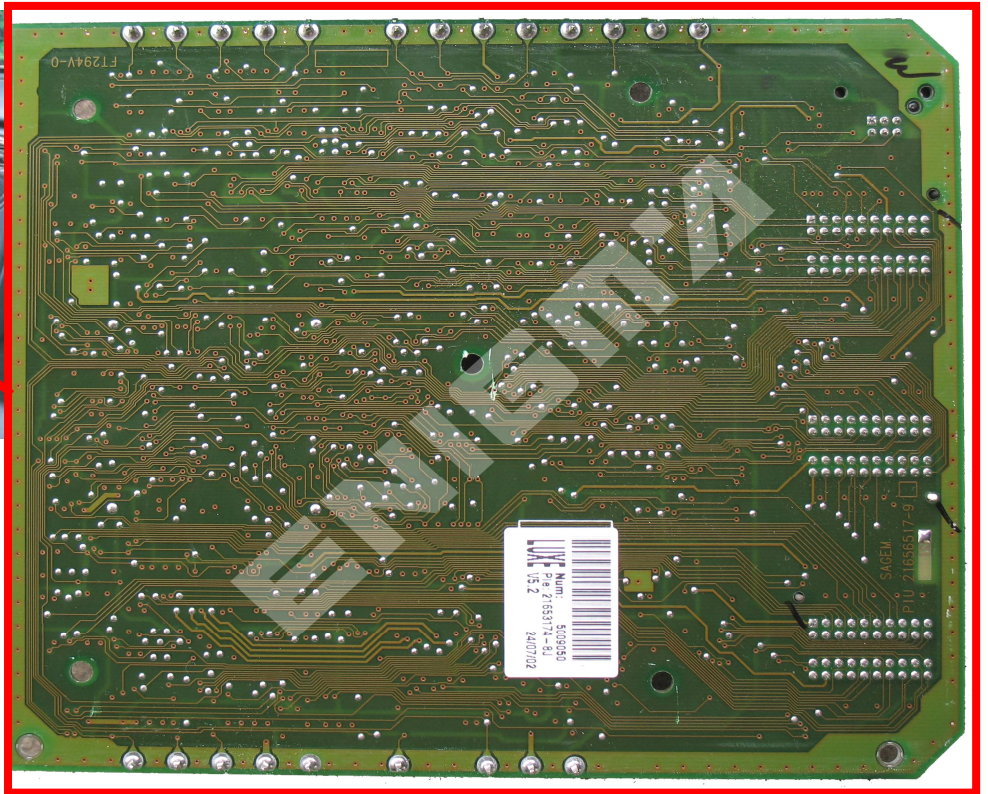

USE CABLE C7, TAKE OFF BACK SIDE FROM BSI, THEN SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN OF BELOW PHOTO:

