


# PEUGEOT 806



USE CABLE C12,  
REMOVE BACK  
PLASTIC COVER  
FROM DASH,  
SOLDER CABLE  
LEADS ACCORDING  
TO COLOURS AS  
SHOWN OF BELOW  
PHOTOS:

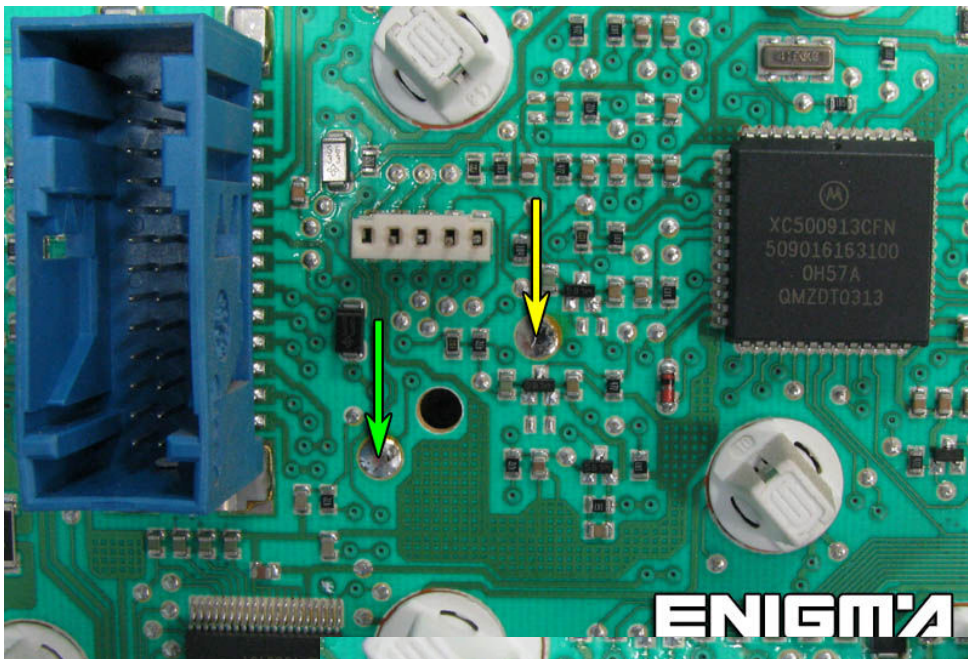