


# PEUGEOT BOXER

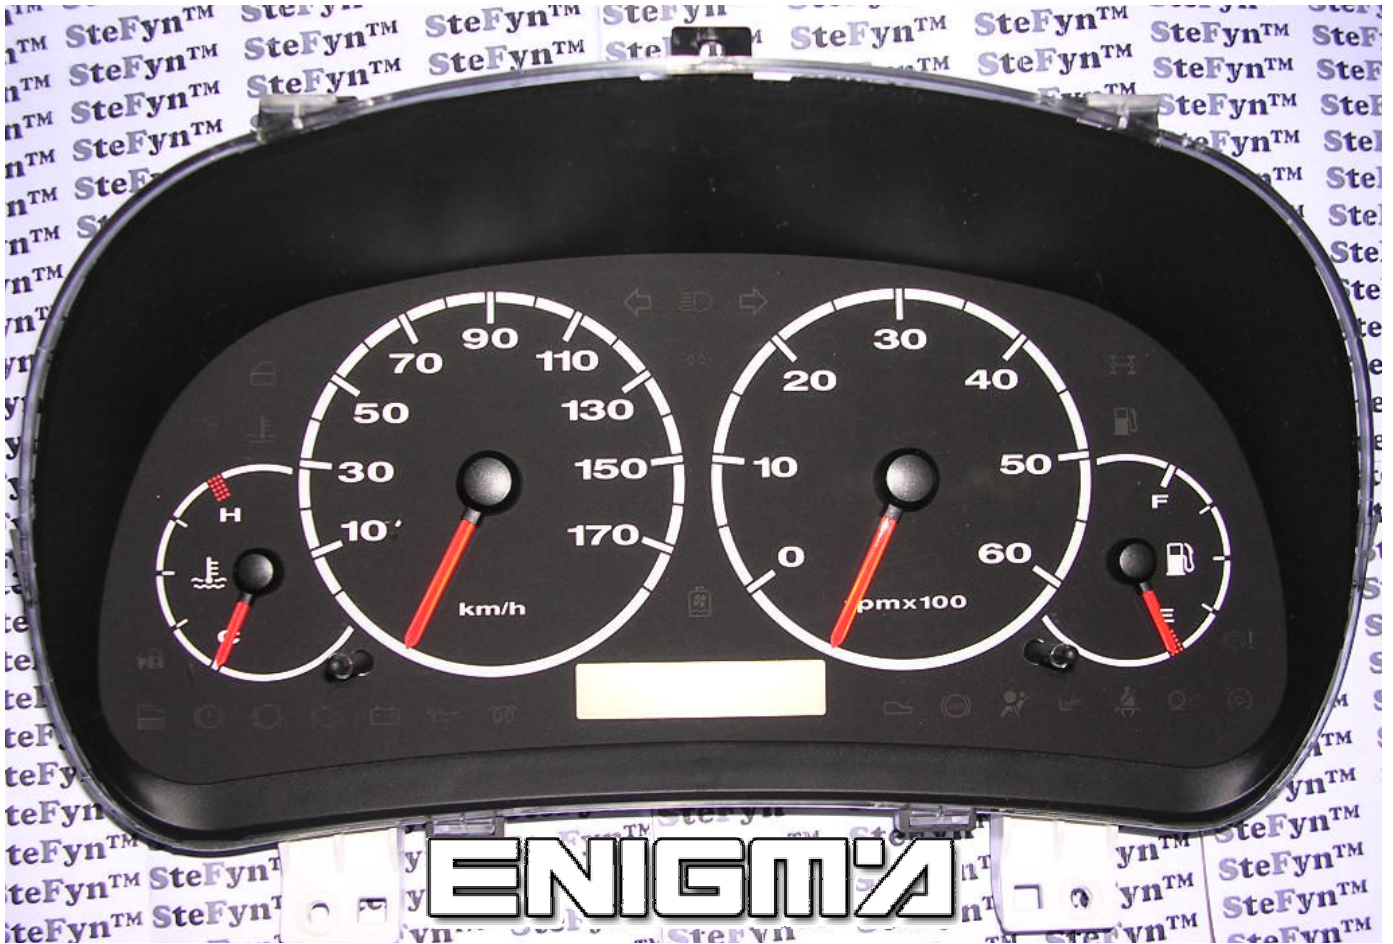

USE CABLE C4, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, LOCATE EPROM MEMORY 95040, USUALLY WE DON'T NEED TO DESOLDER IT, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

