


PEUGEOT EXPERT

USE CABLE C10 O HC08, TAKE OFF CAREFULLY NAILS (TO CONNECT MAKE IT WITH POWER), SCREEN AND SOME PLASTICS TILL WE HAVE CLEAN THE BOARD, NOW CONNECT POWER LEADS LIKE WE CAN SEE ON THIS PHOTO:

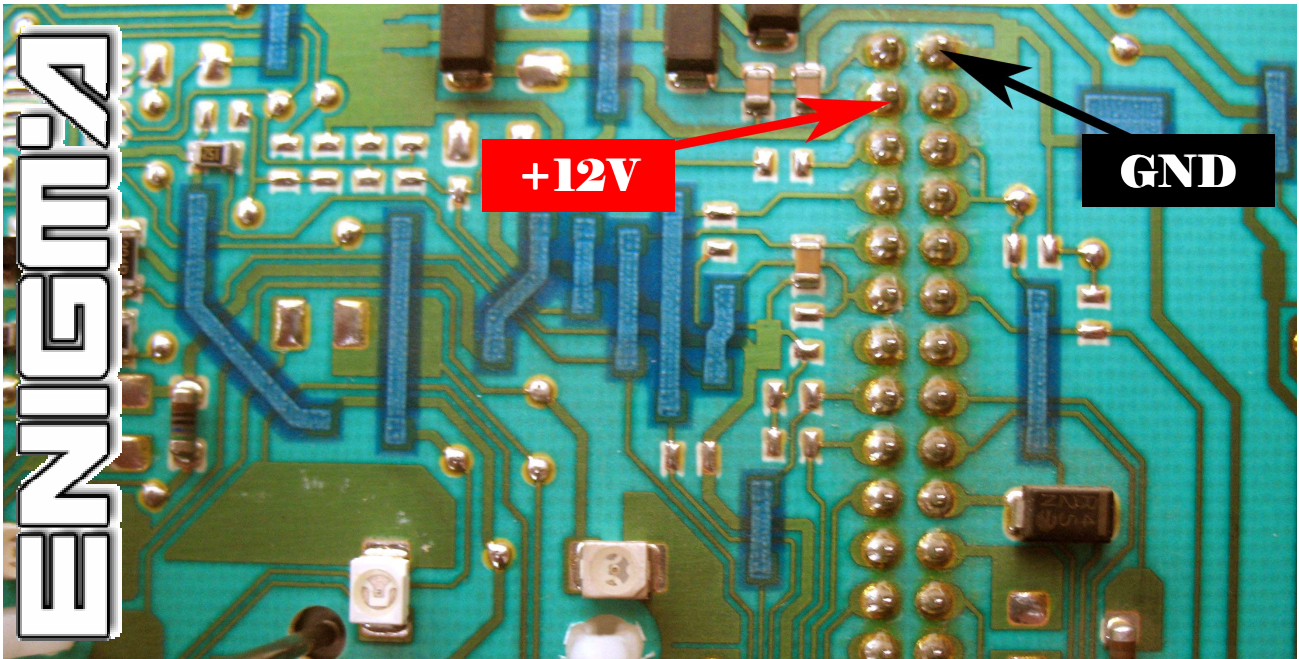

CONNECT OR SOLDER CABLE LEADS ACORDING TO COLOURS AS SHOWN OF BELOW PHOTO, DON´T FORGET TO REALIZE A BRIDGE BETWEEN POINTS:

