



PEUGEOT PARTNER BSI NEC

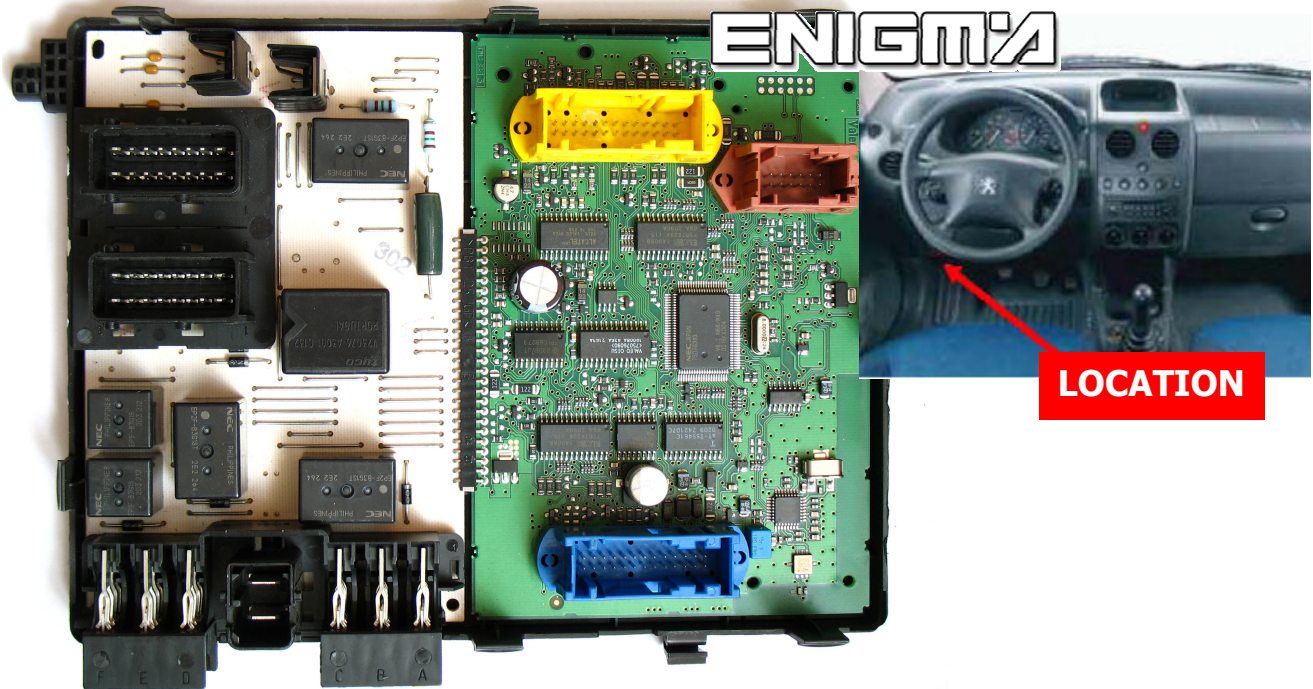

Use **CABLE C13** ALWAYS CONNECTED TO **A1** ADAPTER. REMOVE BOTH SIDES FROM BSI, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN IN NEXT PHOTOS:

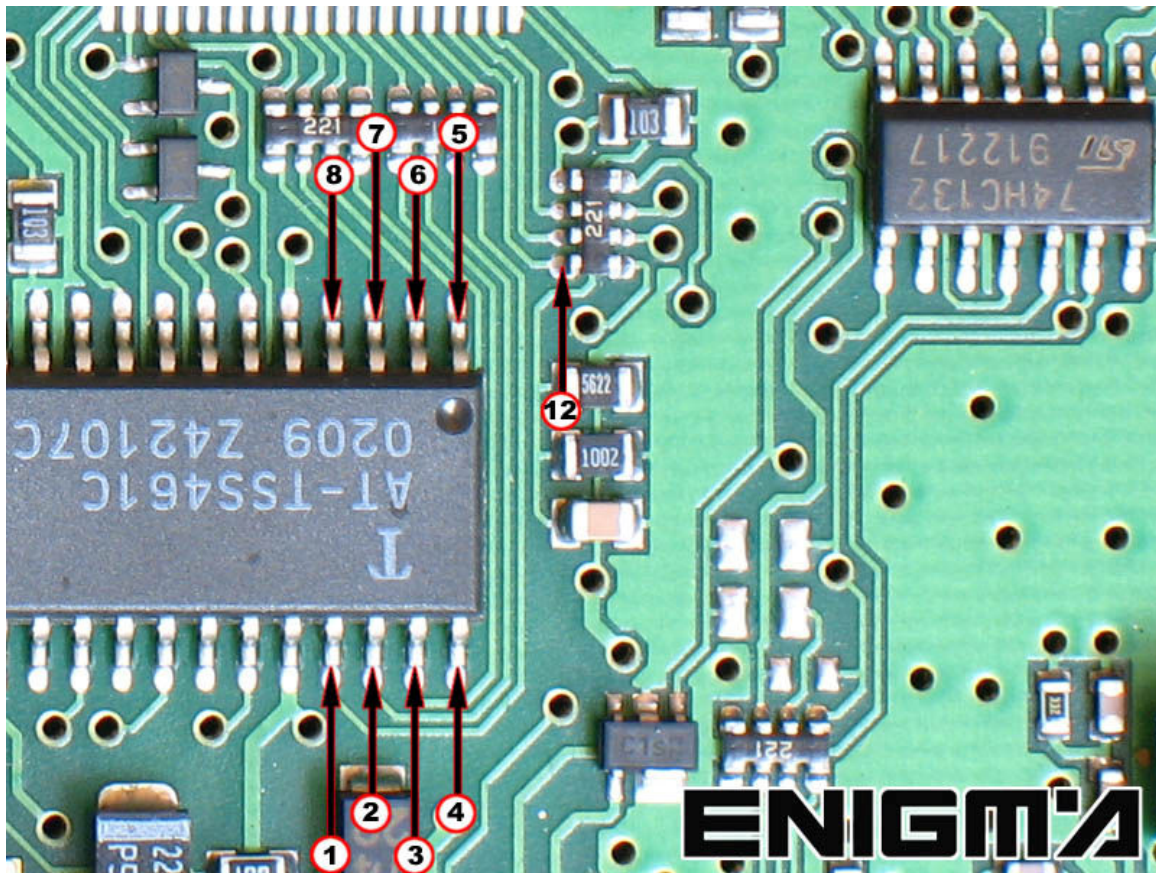

WE MUST **DESOLDER RESISTOR** FROM LEAD 9 AND **UP** PIN 10:

