


# RANGE ROVER 2000-2004 EWS MASK OD46J

LOCATE MODULE LIKE IN PHOTOS, AND REMOVE FROM CAR:



USE SPECIFIC CABLE C18. OPEN BOX, **CHECK MASK** AND IF IT OD46J CONNECT CABLE PLUG LIKE SHOW ON NEXT PHOTO:

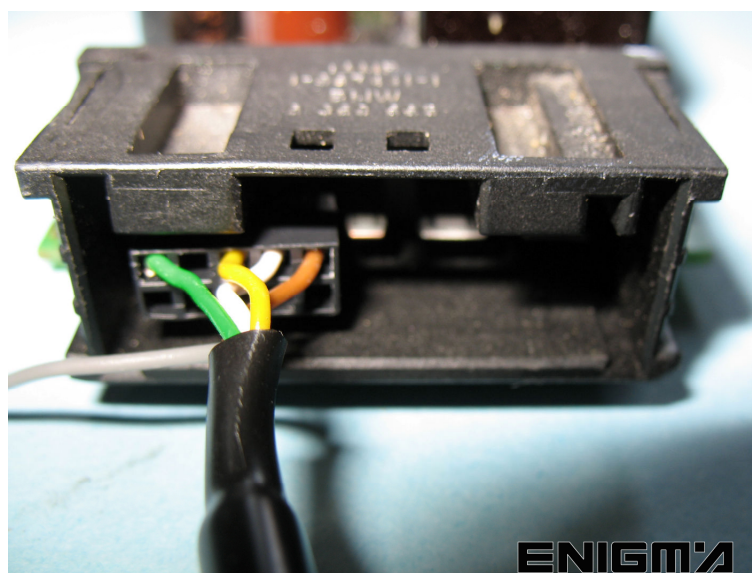

THEN CONNECT PIN FREE TO POINT ON THE MAIN BOARD AS SHOWN OF BELOW PHOTO:

