


RENAULT AVANTIME BSI

ENIGMA



REMOVE FROM CAR THIS BOX:

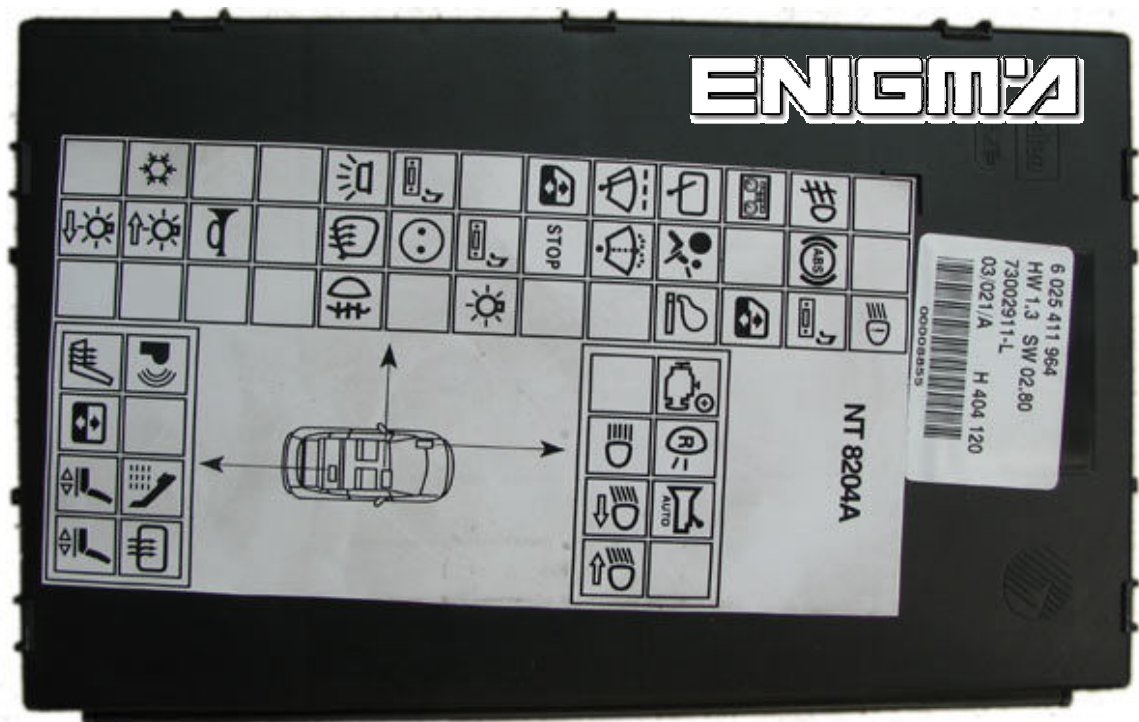

NOW USE CABLE C12, REMOVE BACK SIDE FROM BSI, THEN SOLDER CABLE LEADS ACCORDING TO COLOURS AS YOU CAN SEE ON PHOTOS BELOW:

