


# RENAULT SCENIC FROM 2003 WITH NAVI



WHEN WE HAVE CLUSTER IN OUR HAND, REMOVE ALL PLASTIC COVERS, AND THEN DESOLDER POINTS FROM BACK SIDE OF SCREEN, WE WILL HAVE THIS:

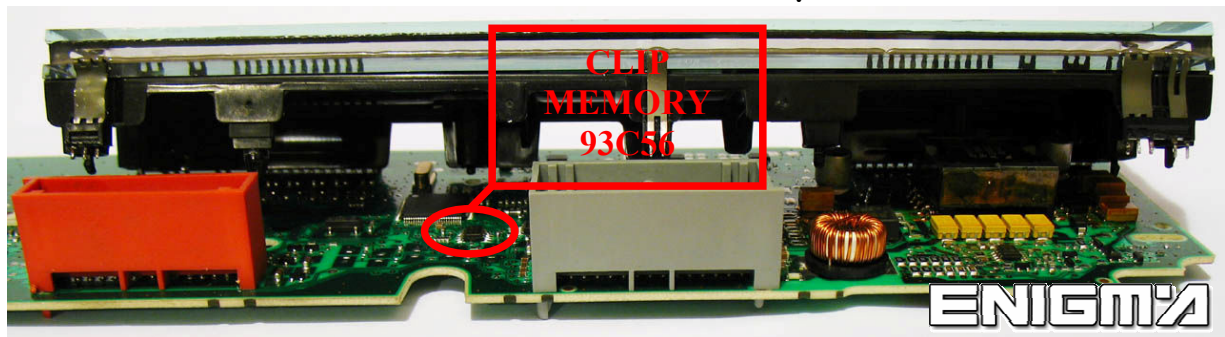

WE CAN CLIP DIRECT EPROM USING CABLE C4, OR USE CABLE C7, IN THIS CASE SOLDER CABLE LEADS LIKE PHOTOS SHOWN TO US:

