


RENAULT TWINGO ST

USE SPECIFIC CABLE C42, TAKE OFF DASH FROM CAR, OPEN BACK OF DASH, WITH TORX SCREWS, THEN FRONT COVER PULLING SOME PLASTICS. WHEN BOARD IS ON OUR HANDS, CONNECT PLUG TO DASH LIKE WE CAN SEE ON NEXT PHOTO:

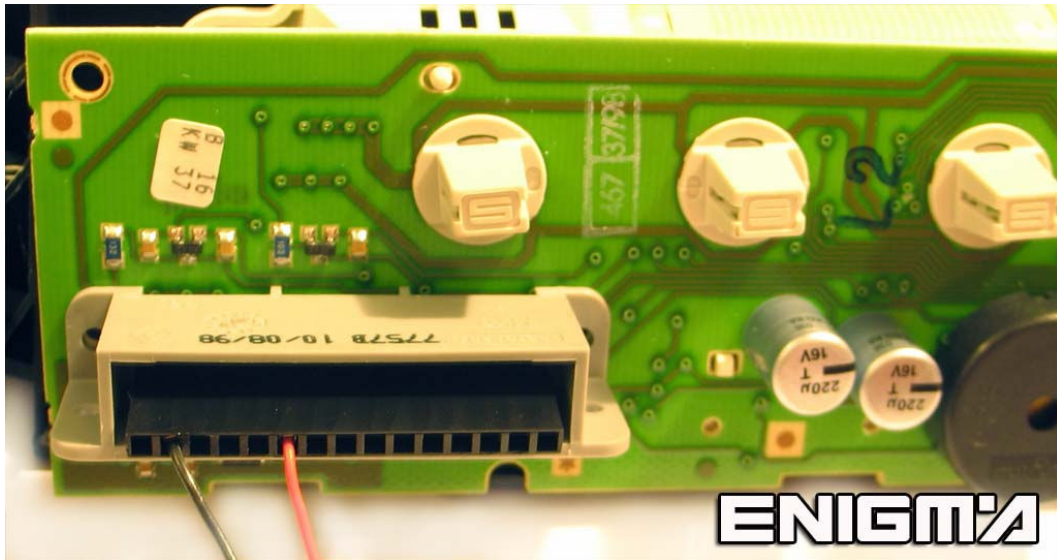

THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW, REMEMBER TO LIFT UP PIN FROM WHITE LEAD:

