



RENAULT TWINGO VDO

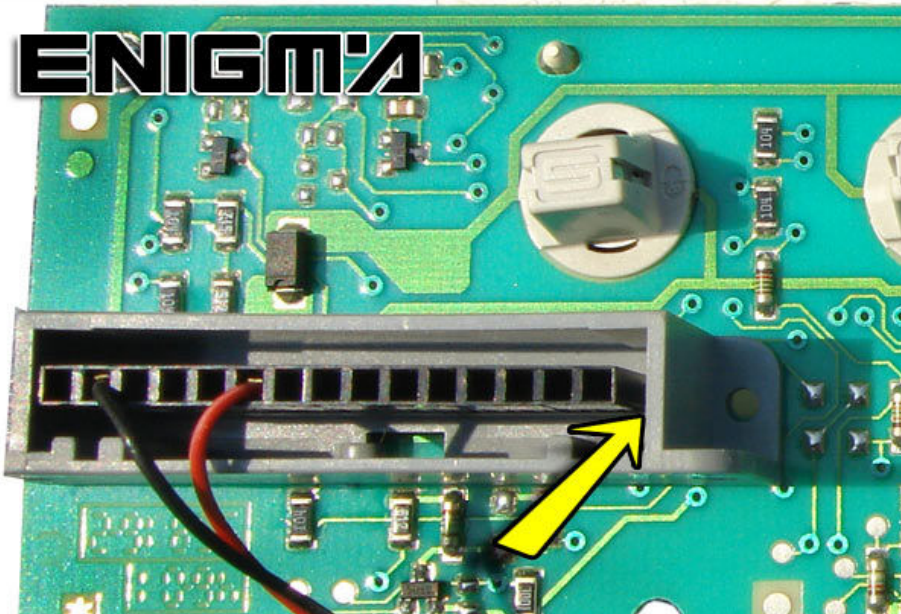

USE SPECIFIC CABLE C42.
WHEN BOARD IS ON OUR
HANDS, CONNECT PLUG TO
DASH LIKE WE CAN SEE ON
NEXT PHOTO, THIS IS THE
POWER:

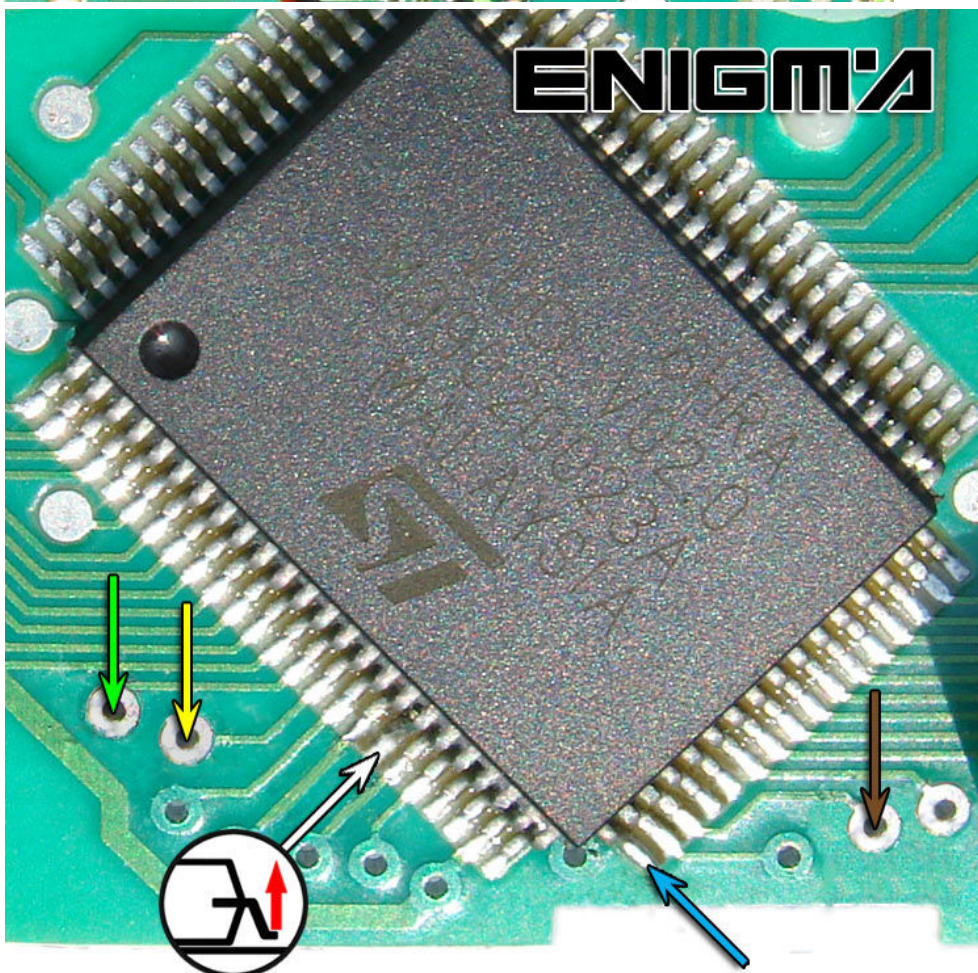

THEN CONNECT OR
SOLDER CABLE LEADS
ACCORDING TO
COLOURS AS SHOWN
ON THE PHOTO, PLEASE
REMEMBER TO LIFT UP
PIN FROM WHITE LEAD: