


ROVER 75 EWS 3.X MASK OD46J

USE SPECIFIC CABLE C18.
TAKE OFF FROM CAR WHITE BOX
LIKE ON THE PHOTO:



ENIGMA

OPEN BOX **CHECK MASK** AND CONNECT CABLE PLUG LIKE SHOW ON NEXT PHOTO:

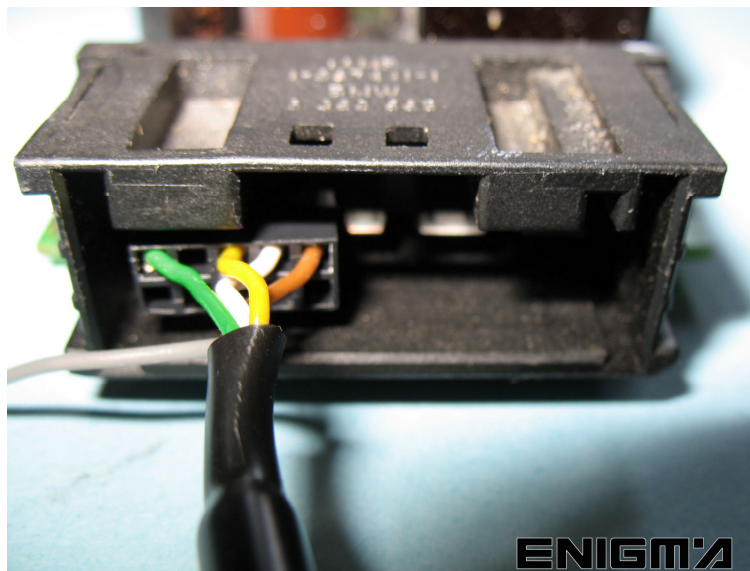

THEN CONNECT PIN FREE TO POINT ON THE MAIN BOARD AS SHOWN OF BELOW PHOTO:

