


SAAB 95 FROM 2005

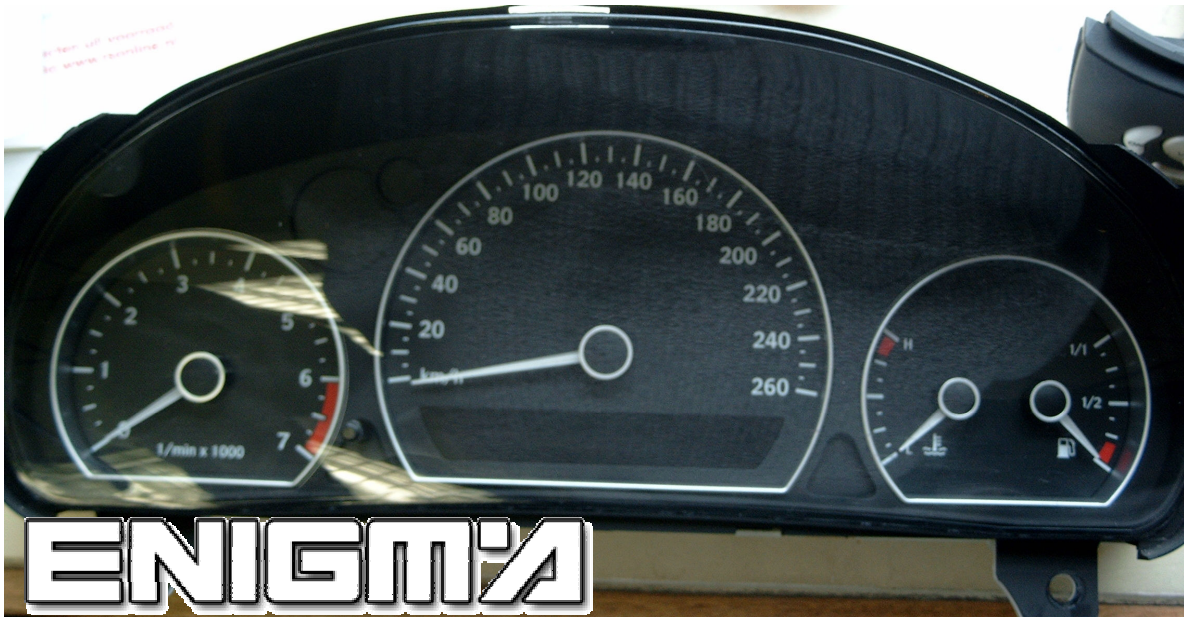

USE CABLE C4, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, THEN LOCATE EPROM MEMORY 93C66, CLEAN IT, IF CLEAN IS OK WE DON'T NEED TO DESOLDER IT, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

