


SUBARU IMPREZA TO 2001

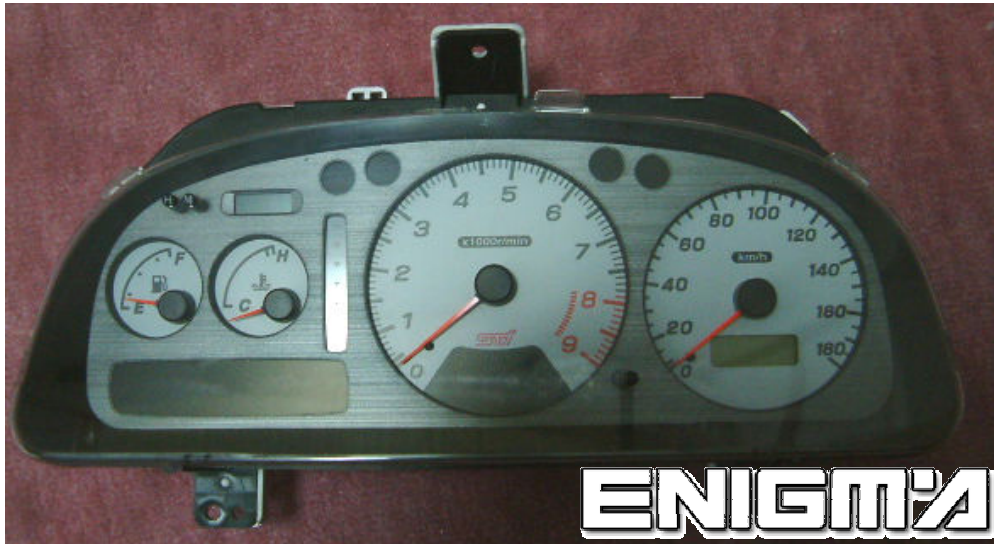

Use C7 CABLE, OPEN
DASH AND REMOVE
SPEDOMETER AND RPM:



NOW ONLY SOLDER CABLE LEADS ACCORDING TO POINTS AS SHOWN ON BELOW
PHOTO:

