


SUZUKI CARRY

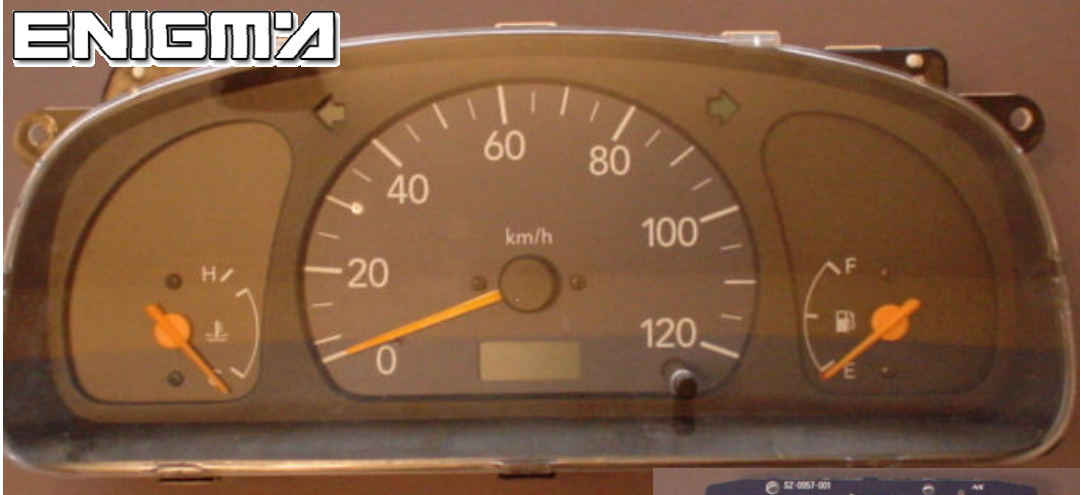

USE C4 CABLE, OPEN DASH AND REMOVE SPEDOMETER:



THEN LOCATE EPROM UNDER IT, BE CAREFULLY; SOMETIMES MUST BE CLEANED, AND CLIP IT CHECKING PIN 1 AS SHOWN TO US PHOTO BELOW:

