


TOYOTA LAND CRUISER C56



USE CABLE C4, REMOVE BACK BOX FROM DASH, WE CAN SEE ON NEXT PHOTO:

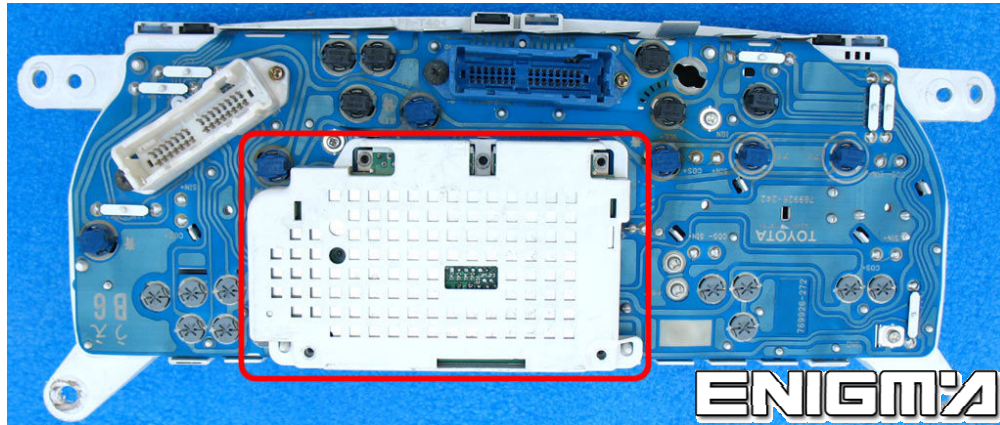

OPEN AND LOCATE EPROM 93C56, SOMETIMES MUST BE CLENED, AND CLIP IT CHECKING **PIN 1** AS SHOWN IN THE PHOTO BELOW:

