


TOYOTA PREVIA

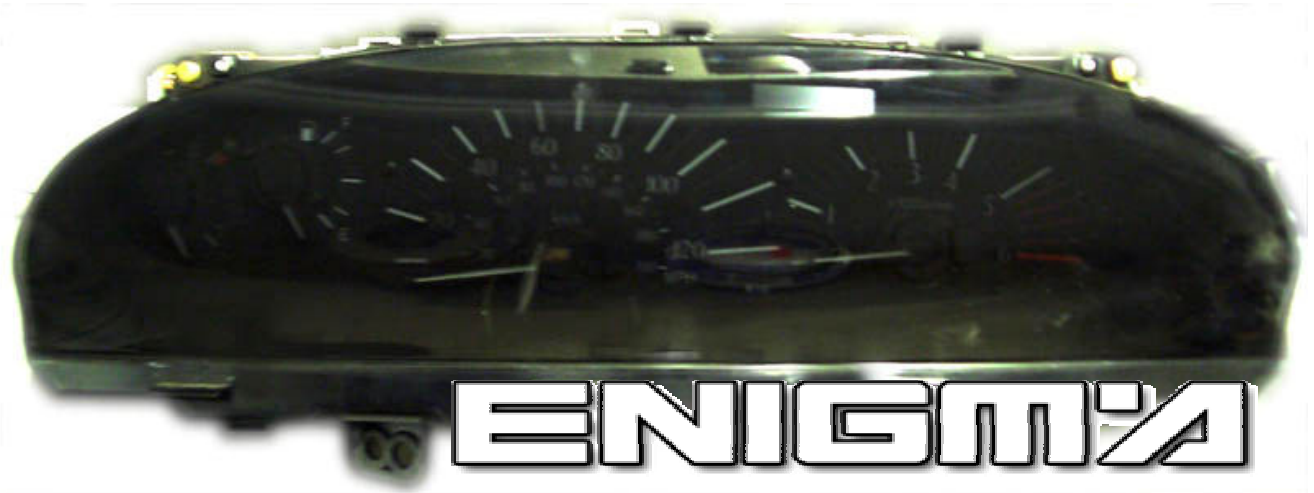

USE C7 CABLE, AFTER REMOVE DASH FROM CAR, TAKE OFF BACK PLASTIC COVER, ON THE BACK SIDE FROM BOARD LOCATE POINTS LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US:

