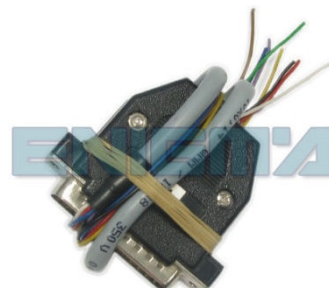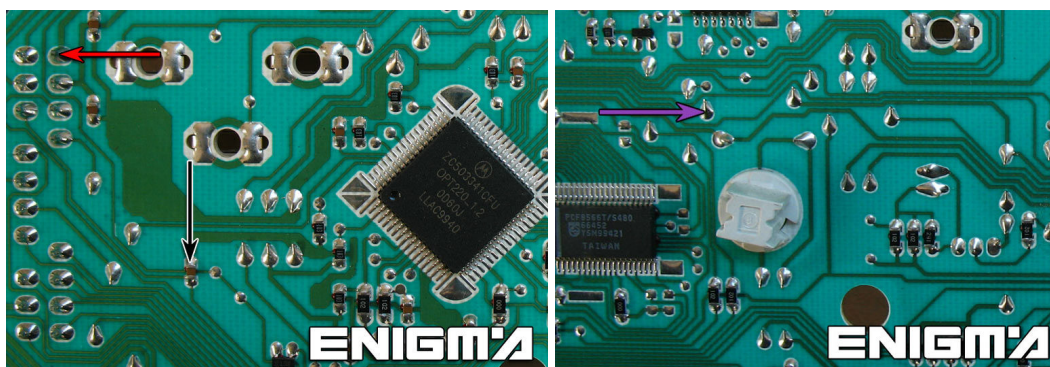# ALFA ROMEO 145 HC05

DASHBOARD PHOTO:

REQUIRED CABLE(s):
C11

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the dashboard and open it carefully.
2. Remove the back side of the dash to get to the main board.
3. First solder cables as shown on **PHOTO 1**.
4. Make sure that the connection you made is secure.
5. Solder cables according to colors as shown on **PHOTO 2**.
   Remember to lift up PIN 21 from microcontroller.
   Remember to put the PIN that you lift back to its place when you finish.
6. Press the **READ EEP** button and save memory backup data.
7. Press the **READ KM** button and check if the value shown on the screen is correct.
8. Now you can use the CHANGE KM function.

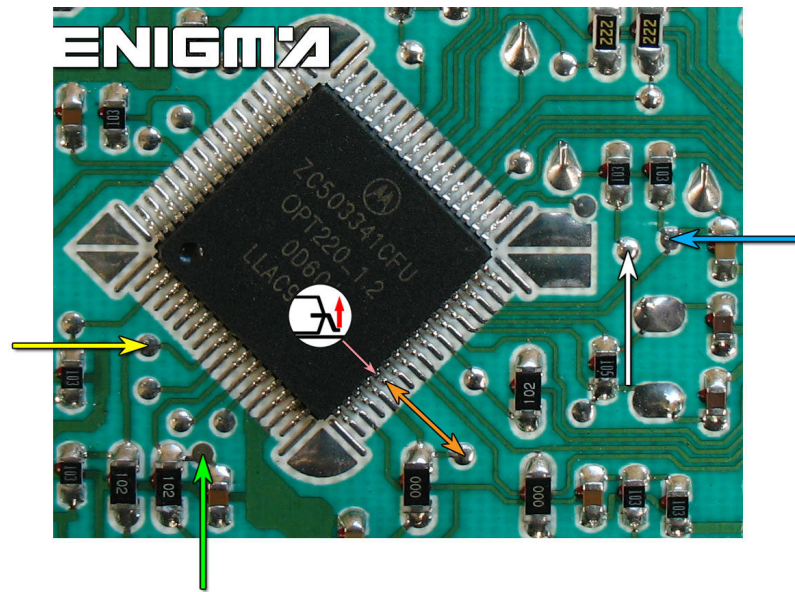**PHOTO 1:** *Solder cables according to the colors like shown on the photos above.*

FOR MORE INFORMATION
Call **0034 983 359 787** or visit **www.enigmatool.com**
DIAGCAR ELECTRONICS S.L.   Ebanistería 1A, 47610 Zaratán, Spain

Electronics
Diagcar S.L.

PHOTO 2: Solder cables according to the colors like shown on the photo above.

LEGAL DISCLAIMER:

DIAGCAR ELECTRONICS S.L. does not take any legal responsibility of illegal use of any information stored in this document. Copying, distributing or taking any action in reliance with the content of this information is strictly prohibited.