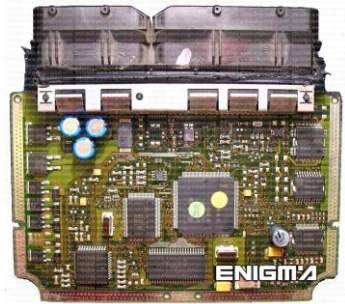# AUDI EDC 15 ECU MEMORY

ECU PHOTO:

REQUIRED CABLE(s):
C4

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Normally works by OBD but if not you have to take it out and open.
2. Locate the 24C04 EEPROM memory.
3. Look at photo below to find correct position of PIN1.
4. Connect the EEPROM memory using C4 cable.
5. Make sure that you connected the C4 clip correctly.
6. Press the READ EEP button and save EEPROM memory backup data.
7. Press the READ KM button and check if the value shown on the screen is correct. If not try to increase voltage using slider.
8. Now you can use the CHANGE KM function.

PHOTO 1: Connect cable C4 to the EEPROM memory according to the picture above.

LEGAL DISCLAIMER: