

ENIGMA USER MANUAL

BMW E36 COMPACT VDO

DASHBOARD PHOTO:



REQUIRED CABLE(s): C16



FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the dashboard from the car.
2. Locate the DashDiag connector.
3. Look at photo below to find the correct way of connection.
4. Connect the C16 cable.
5. Make sure that you connected the C16 cable correctly.
6. Now you can use the CHANGE KM function.

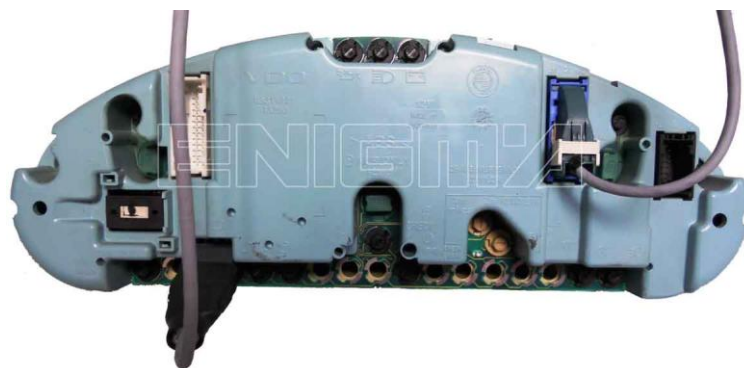


PHOTO 1: Connect cable C16 to the dash like on the photo above.

LEGAL DISCLAIMER:

DIAGCAR ELECTRONICS S.L. does not take any legal responsibility of illegal use of any information stored in this document. Copying, distributing or taking any action in reliance with the content of this information is strictly prohibited.

FOR MORE INFORMATION

Call **0034 983 359 787** or visit www.enigmatool.com

DIAGCARELECTRONICS S.L. Ebanistería 1A, 47610 Zaratán, Spain



Diagcar S.L.