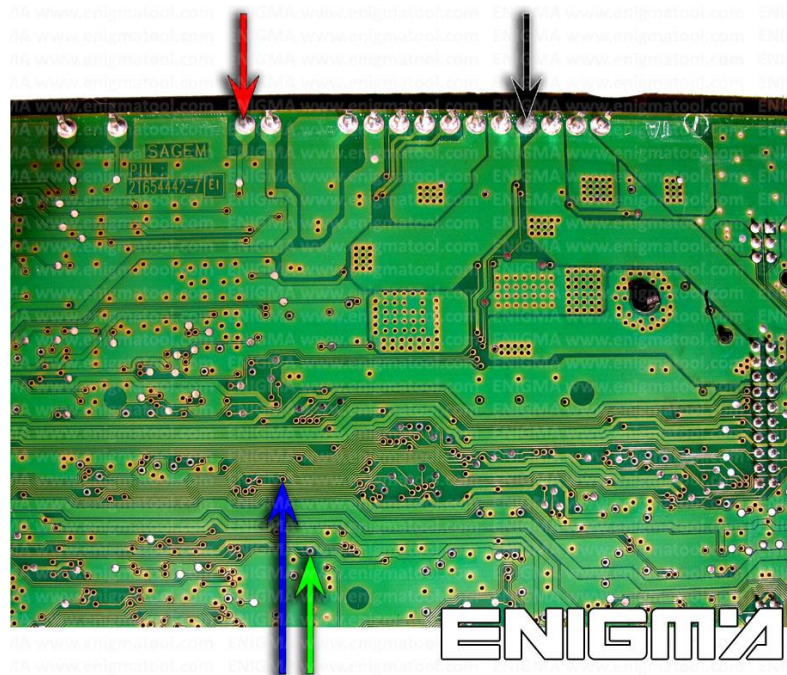# CITROEN C8 BSI TO 2005

BSI AND LOCATION:

REQUIRED CABLE(s):
C12

FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the **BSI** module and open it carefully.
2. Solder cable **C12** to the points on board as shown on **PHOTO1.**
3. Make sure that the connection you made is secure.
4. Use the **EDITOR** to save memory backup data.
5. Press the **READ KM** button and check if the value shown on the screen is correct.
6. Now you can use the **CHANGE KM** function.

PHOTO 1: *Solder C12 cables according to the colors like shown on the photo above.*

LEGAL DISCLAIMER: