



FIAT BRAVO-BRAVA-MAREA HC08

USE CABLE C12, REMOVE BACK PLASTIC COVER FROM DASH, PLEASE MAKE IT CAREFULLY, AND NOW CONNECT POWER LEADS LIKE SEE ON NEXT PHOTOS:

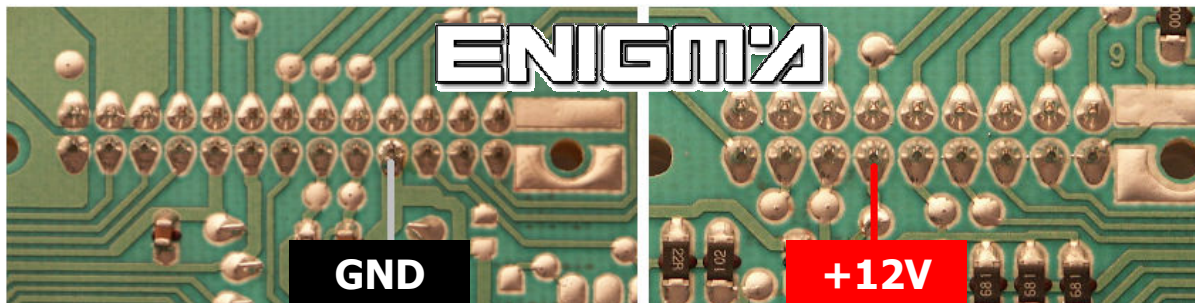

CONNECT OR SOLDER CABLE LEADS ACORDING TO COLOURS AS SHOWN OF PHOTO BELOW, **DON'T FORGET TO REALIZE A BRIDGE BETWEEN 2 POINTS:**

VERSION 1:

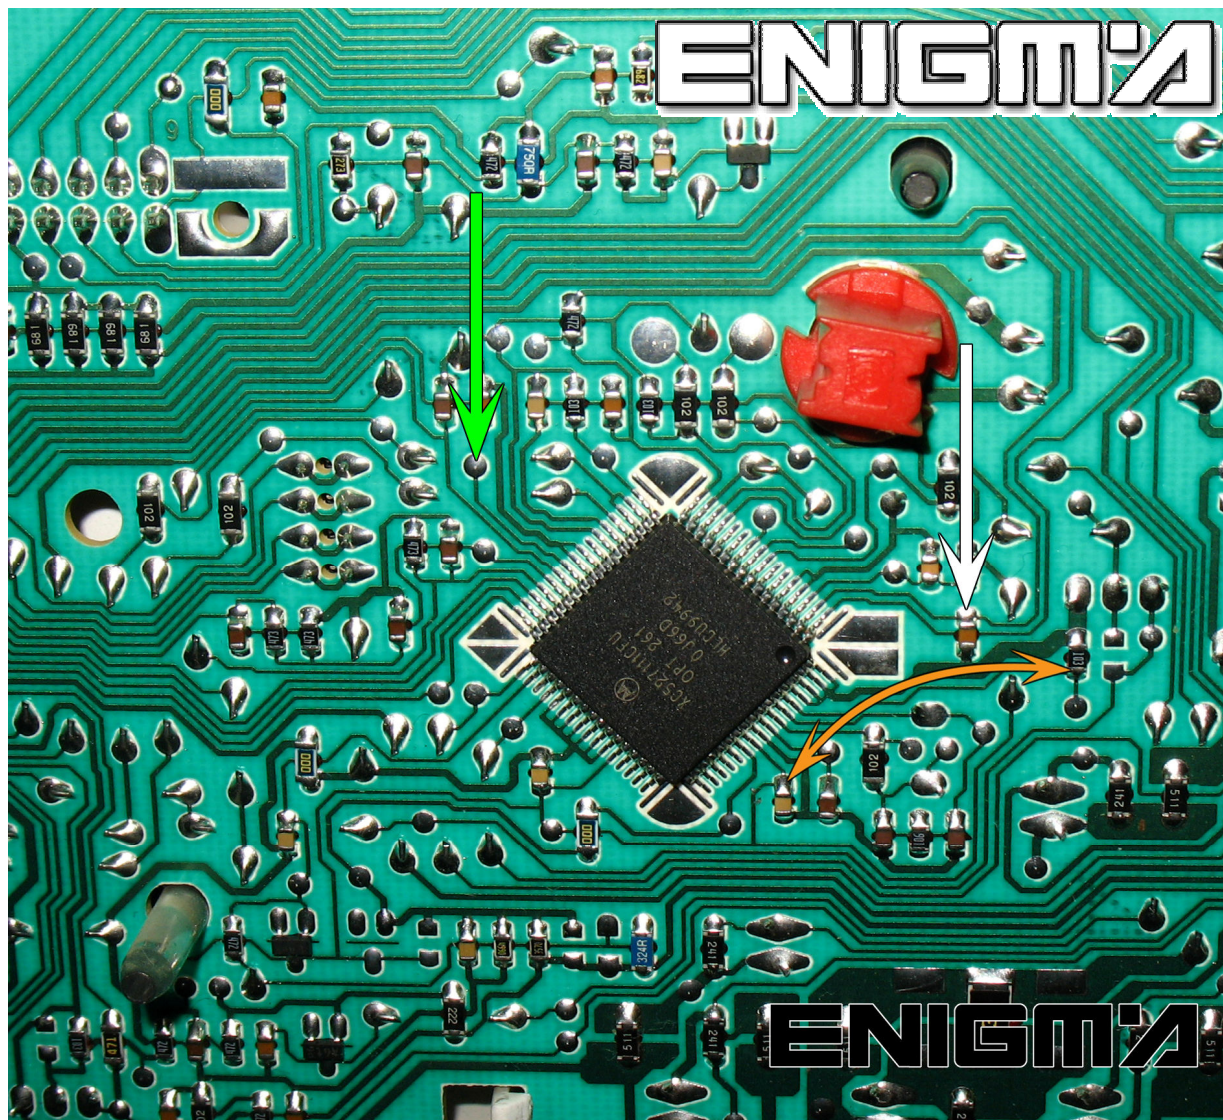

VERSION 2:

