


FORD FOCUS & CMAX HC12



VERSION 1:

USE CABLE C12 - HCS12, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, THEN SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW:

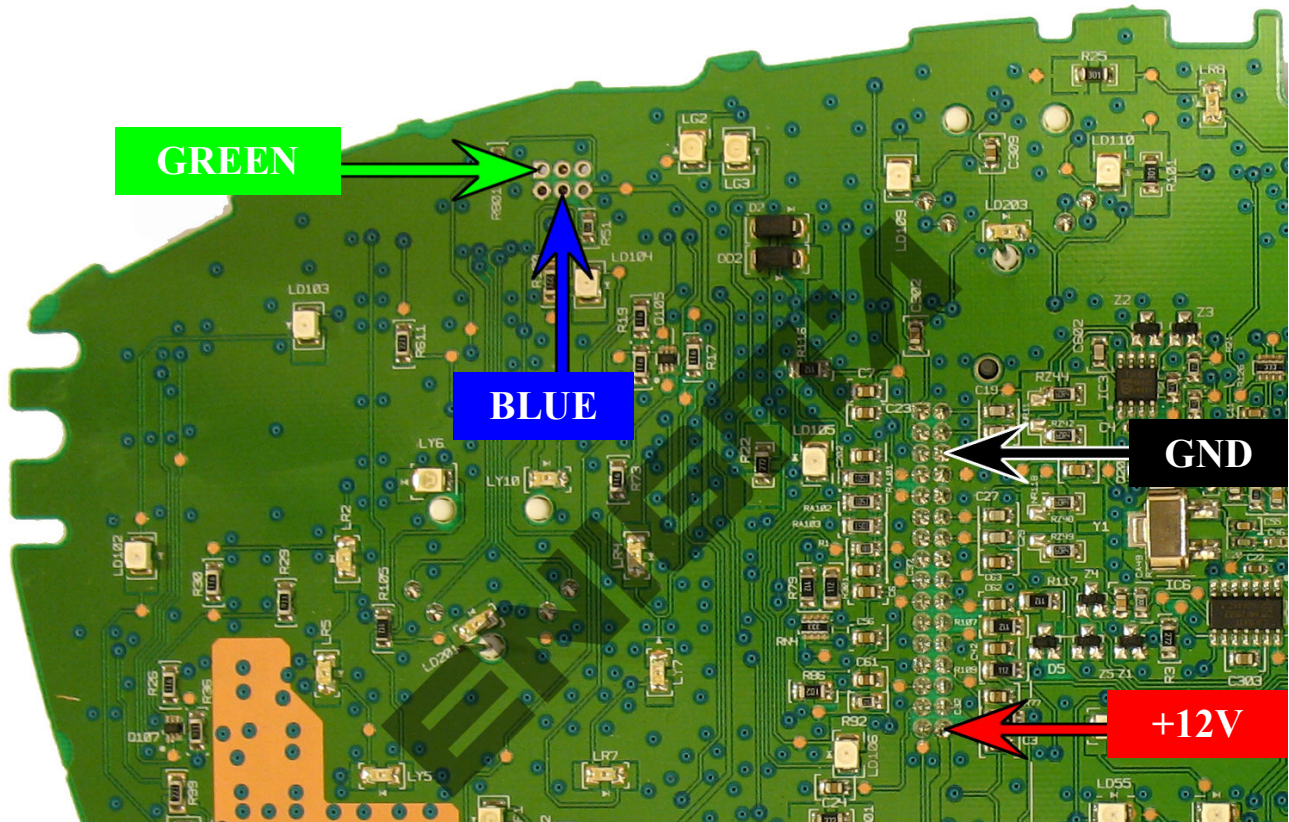

VERSION 2:

USE SPECIFIC CABLE C43, REMOVE BACK COVER FROM DASH, AND THEN CONNECT PLUG LIKE YOU CAN SEE ON PHOTO BELOW:

