


FORD MUSTANG TO 2004

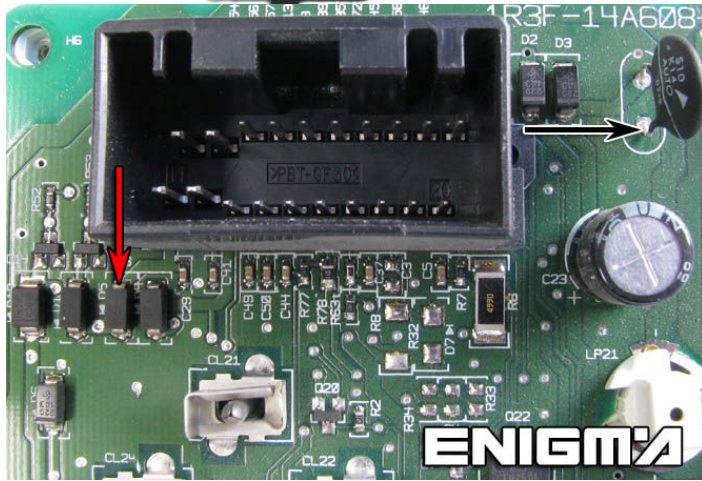

USE CABLE C11, REMOVE BACK PLASTIC COVER FROM DASH, THEN ON THE MAIN BOARD, SOLDER POWER CABLES:

AND FINALLY SOLDER CABLE LEADS

ACCORDING TO COLOURS AS SHOWN ON BELOW PHOTO:

