


# FORD PUMA HC11



USE SPECIFIC CABLE C39, TAKE OFF FROM CAR DASH, OPEN BACK OF DASH, WITH 5 TORX SCREWS. WHEN BACK SIDE OF BOARD IS IN FRONT, CONNECT PLUG TO DASH LIKE WE CAN SEE ON NEXT PHOTO:

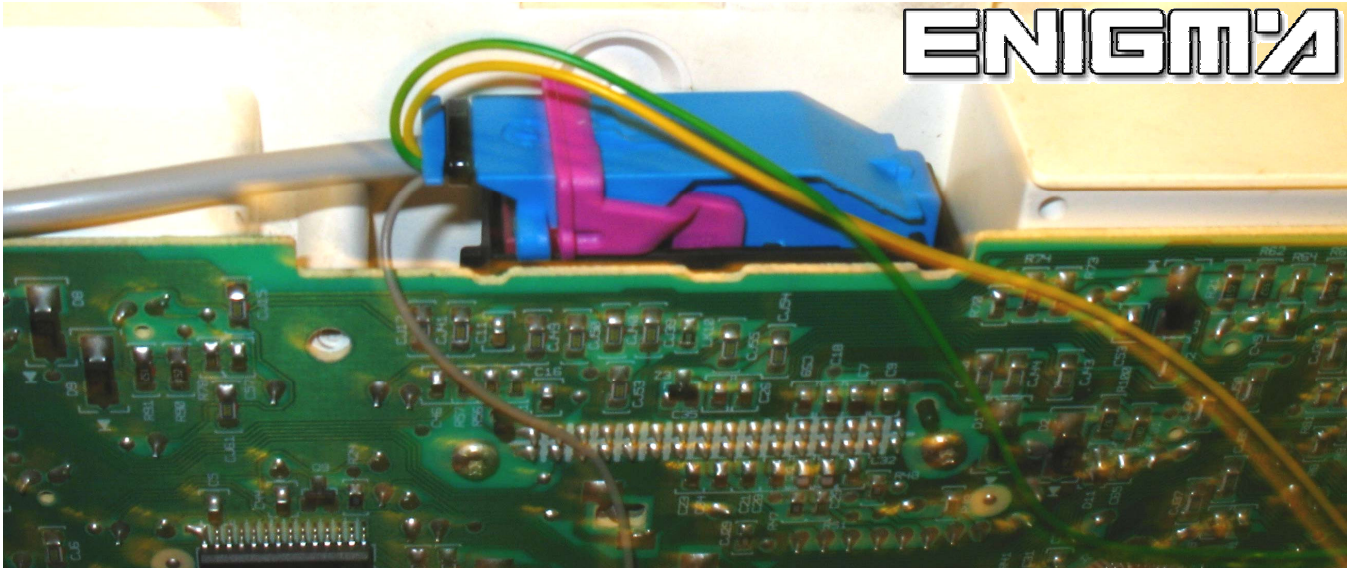

THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW:

