


FORD SPORT TRAC

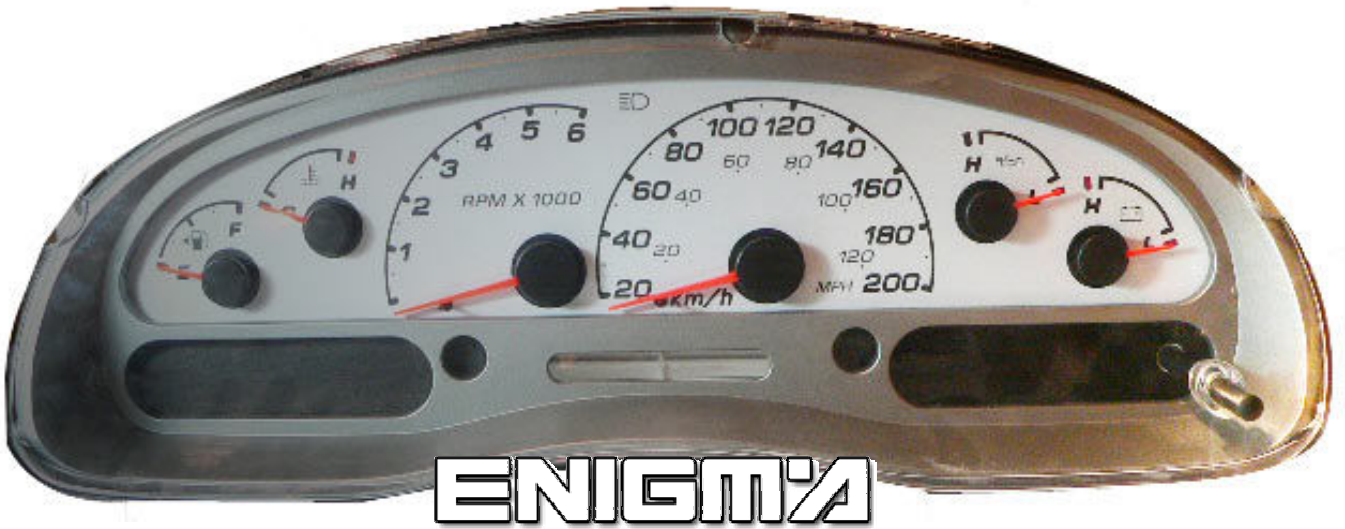

USE CABLE C12, REMOVE BACK SIDE FROM DASH, THEN WE MUST SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN OF BELOW PHOTO:

