


FORD TVI TACHOGRAPH

VERSION 1:



USE CABLE C4, OPEN ALL MODULE, PLEASE MAKE IT CAREFULLY, IT IS NOT DIFFICULT, BUT HAS A LITTLE DIFFICULTY; THEN LOCATE EPROM MEMORY 93C66, WE DON'T NEED TO DESOLDER IT, AND CLIP IT CHECKING **PIN 1** AS SHOWN OF PHOTO BELOW:

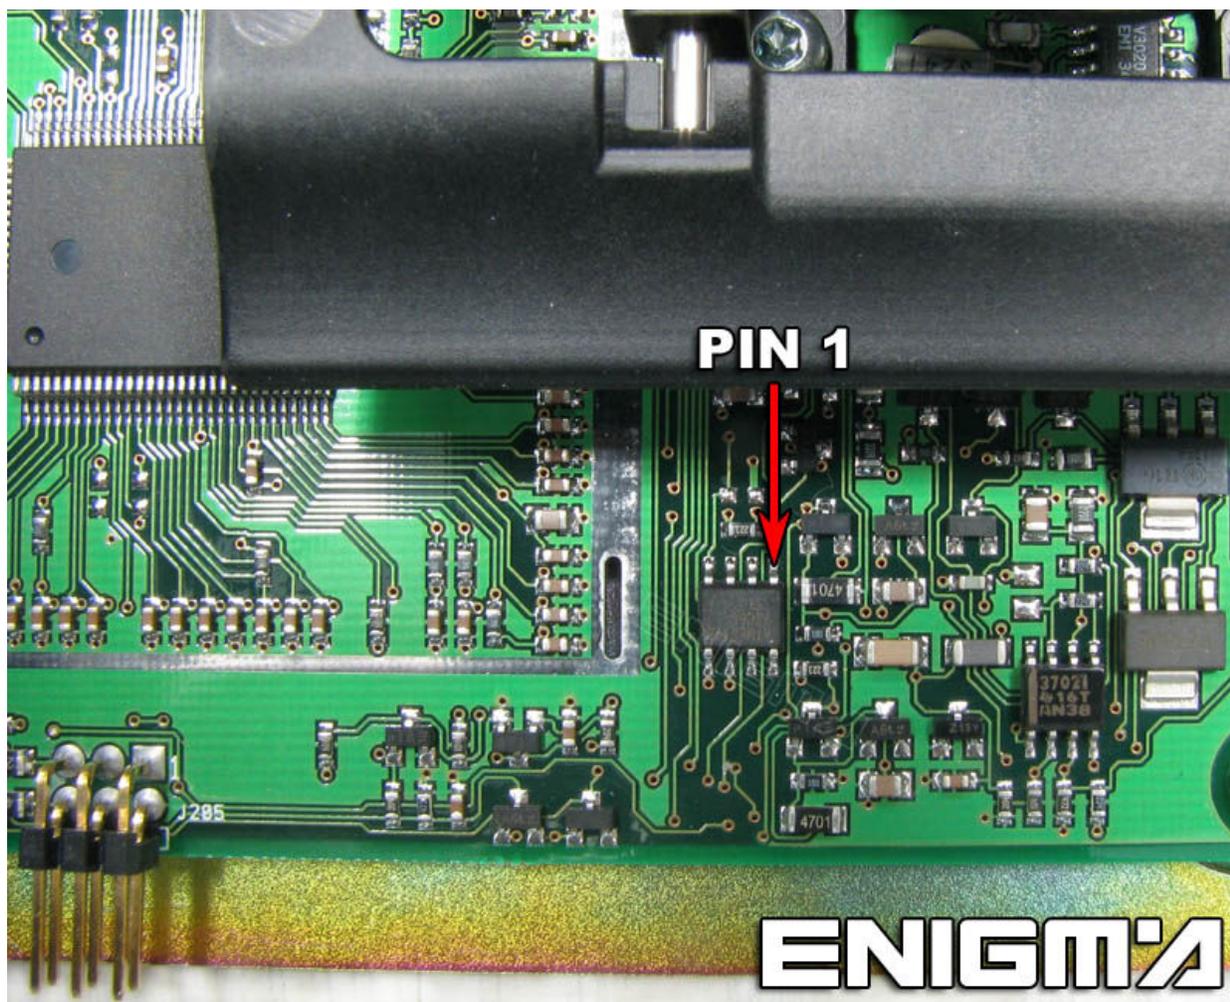

VERSION 2:



USE CABLE C4, OPEN ALL MODULE, PLEASE MAKE IT CAREFULLY, IT IS NOT DIFFICULT, BUT HAS A LITTLE DIFFICULTY; THEN LOCATE EPROM MEMORY 93C66, WE DON'T NEED TO DESOLDER IT, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

