


HONDA CB 600 FROM 2006

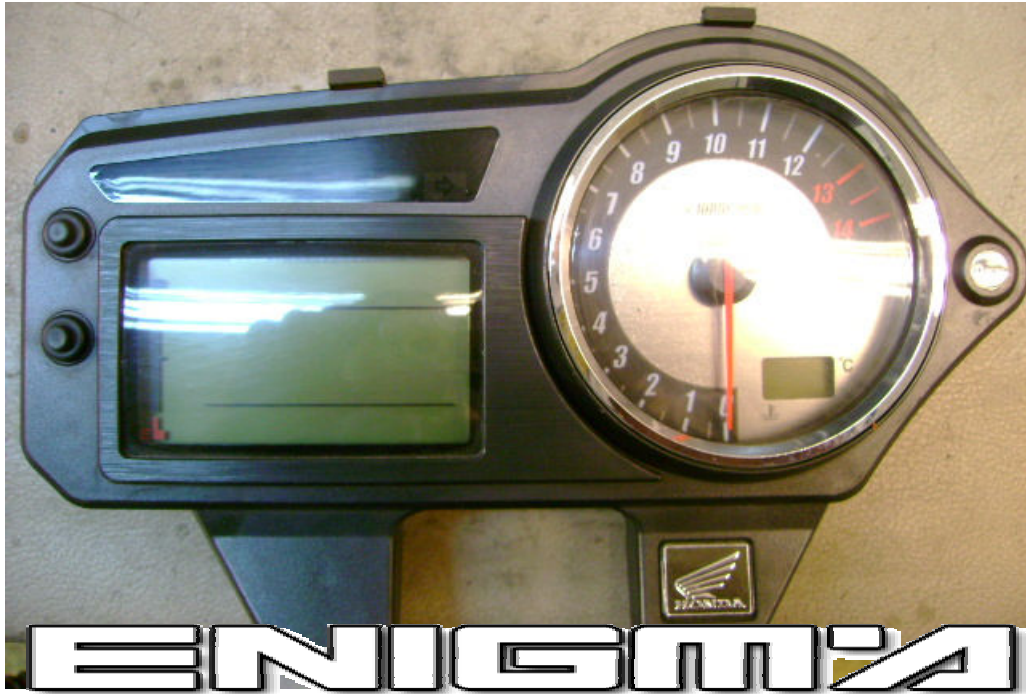

USE CABLE C7, REMOVE BACK PLASTIC COVER FROM DASH, THEN LOCATE EEPROM POINTS, AND SOLDER CABLE LEADS CHECKING NUMBERS AND COLOURS AS SHOWN INTO BELOW PHOTO:

