


HONDA FRV 2004-2007

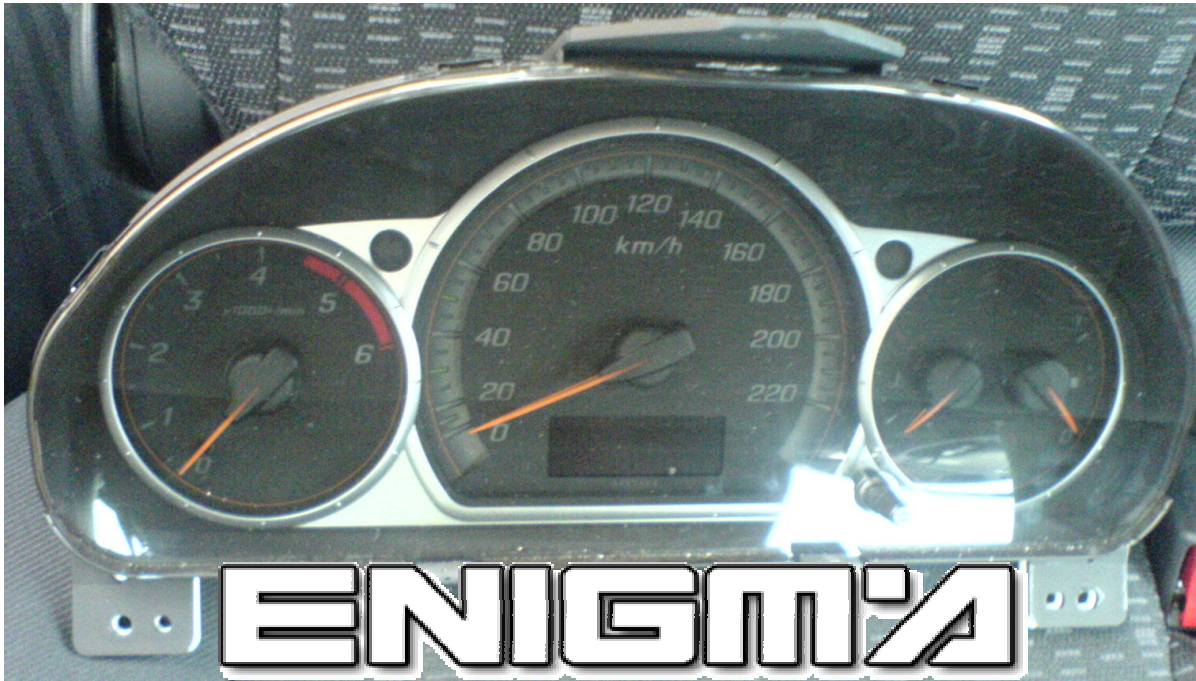

USE CABLE C4, OPEN BACK SIDE OF DASH, CAREFULLY, THEN LOCATE EPROM 93C66 MEMORY, AND CLIP IT CHECKING **PIN 1** AS SHOWN OF BELOW PHOTO:

