


HONDA FRV 2007

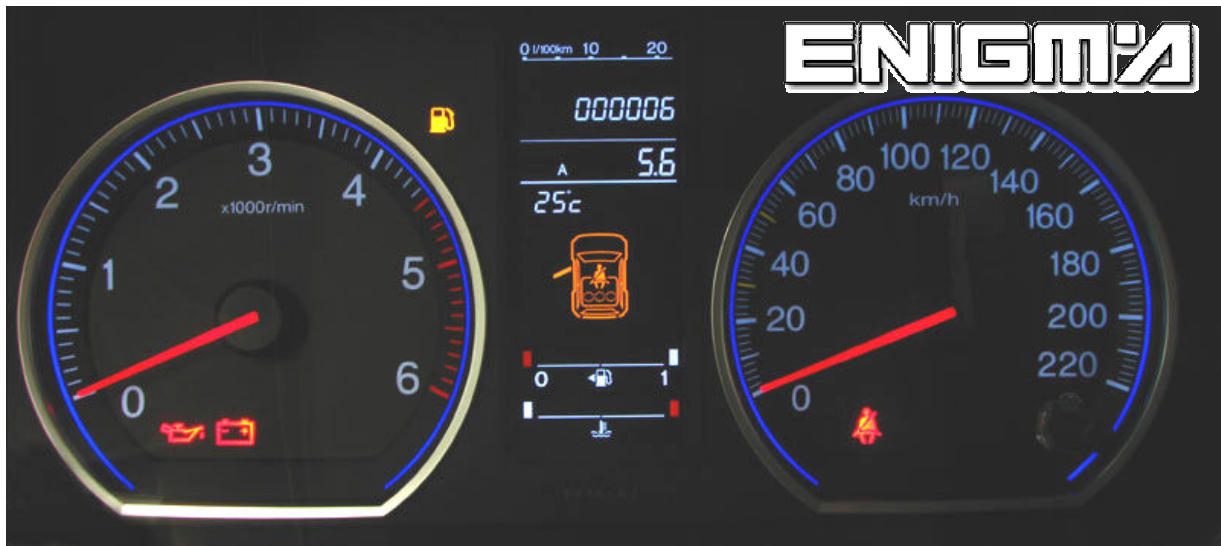

USE CABLE C4, OPEN DASH COMPLETELY, PLEASE MAKE IT CAREFULLY, THEN LOCATE EEPROM AND CLIP IT CHECKING **PIN 1** AS SHOWN OF PHOTO BELOW:

