


HYUNDAI GETZ

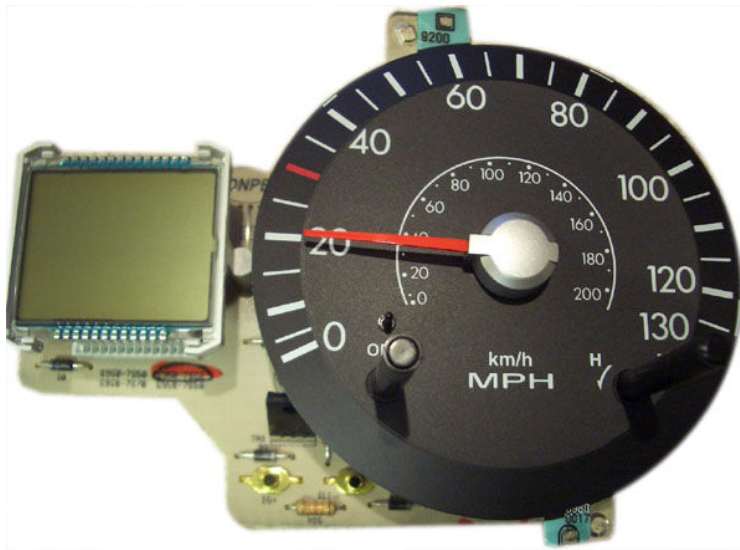

USE C7 CABLE, OPEN DASH AND REMOVE ONLY SPEDOMETER LIKE ON SIDE PHOTO, THEN WE CAN SEE THE 93C46 EPROM, AND WITH THE PHOTO BELOW WE CAN SOLDER CABLE LEADS ACCORDING TO COLOUR:

