


# JAGUAR XK8

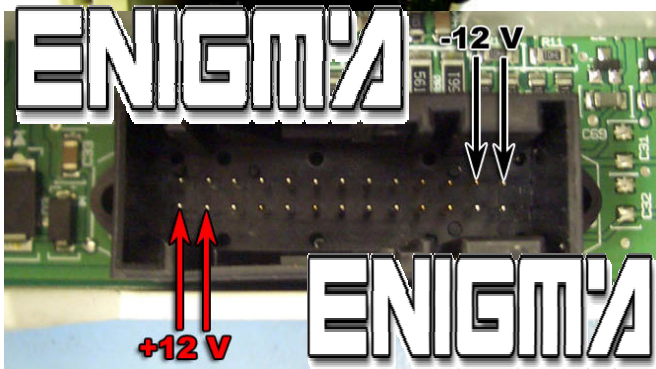

USE CABLE C11, REMOVE BACK COVER FROM DASH, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON PHOTO, REMEMBER TO LIFT UP ONE PIN FROM MICRO:

