


MAZDA 121



USE SPECIFIC CABLE C37, REMOVE DASH FROM CAR, AND NOW REMOVE BACK PLASTIC COVER, FIXED WITH 5 TORX SCREWS. WHEN BACK SIDE OF BOARD IS IN FRONT OF US, CONNECT PLUG TO DASH LIKE WE CAN SEE

ON NEXT PHOTO:

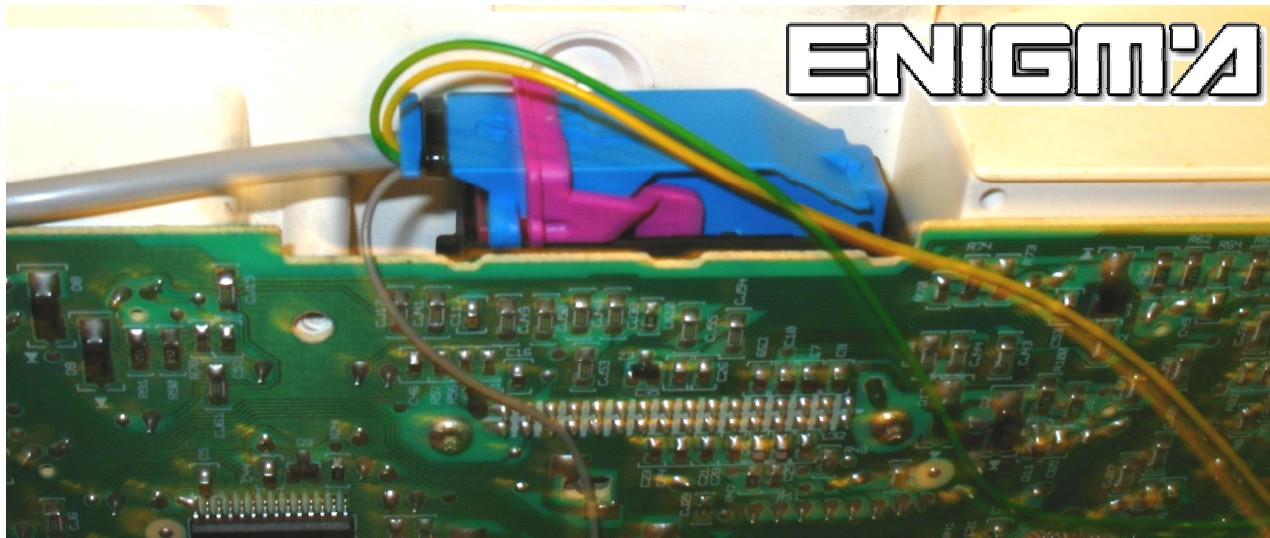

AND THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN ON THE PHOTO BELOW:

