


MERCEDES BENZ SPRINTER EZS FROM 2006

USE CABLE **C45 + A6 ADAPTER**. REMOVE MODULE FROM CAR CAREFULLY:




NOW REMOVE BACK PLASTIC COVER FROM **EZS**, AND LOCATE POINTS ON THE BOARD CHECKING PHOTOS BELOWS AND SOLDER CABLE LEADS AS IT SHOWS TO US:

VERSION 1:

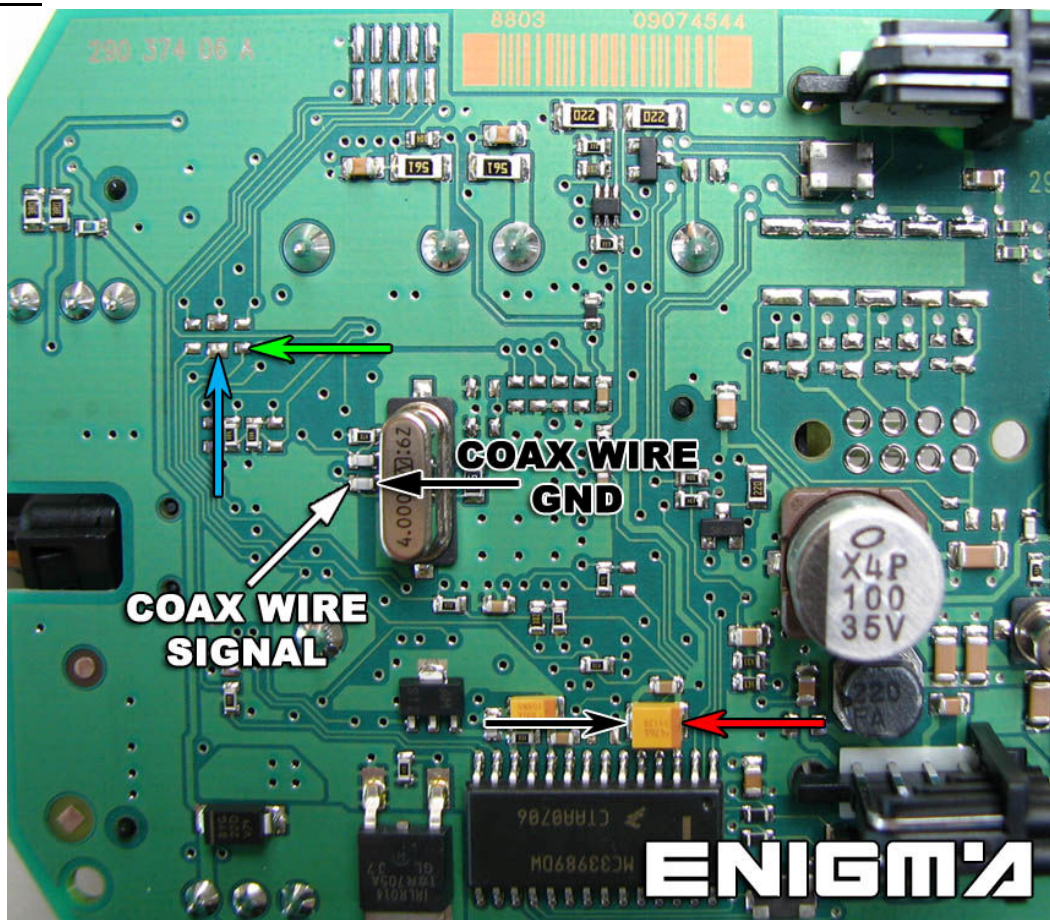

VERSION 2:

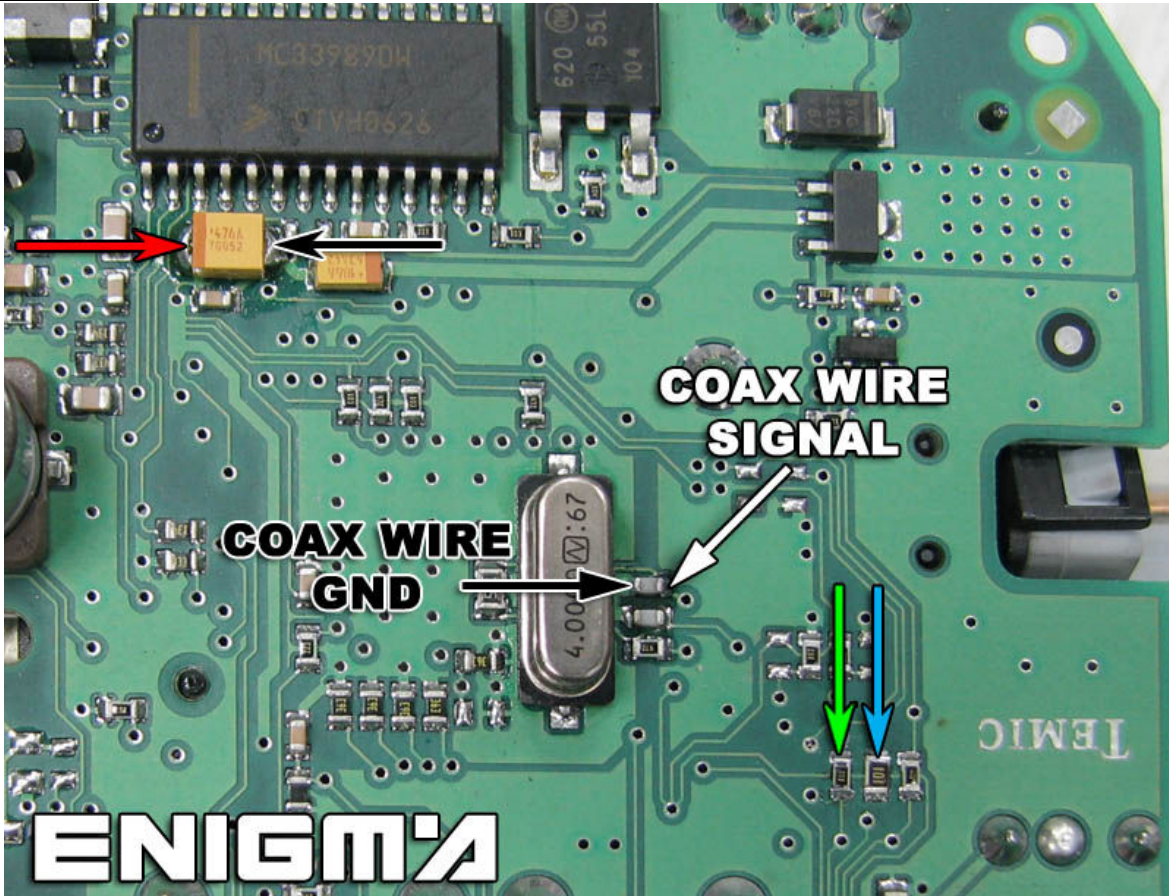

VERSION 3:

